Journal of Visualized Experiments

Real-time DC-dynamic biasing method for switching time improvement in severely underdamped fringing-field electrostatic MEMS actuators --Manuscript Draft--

Manuscript Number:	JoVE51251R4
Full Title:	Real-time DC-dynamic biasing method for switching time improvement in severely underdamped fringing-field electrostatic MEMS actuators
Article Type:	Methods Article - JoVE Produced Video
Keywords:	Microelectromechanical systems; actuators; switching time; settling time; electrostatic devices; micromachining; thin film devices
Manuscript Classifications:	93.33.44: lithography (circuit fabrication); 93.33.48: microminiaturization; 93.33.50: nanodevices (electronic); 93.33.64: reconfigurable hardware; 93.33.81: switching circuits; 93.37.59: nanodevices (mechanical); 97.70.4: dynamics (physics); 97.70.7: electrostatics
Corresponding Author:	Joshua Small, Ph.D. University of California Davis Davis, CA UNITED STATES
Corresponding Author Secondary Information:	
Corresponding Author E-Mail:	jasmall@ucdavis.edu
Corresponding Author's Institution:	University of California Davis
Corresponding Author's Secondary Institution:	
First Author:	Joshua Small, Ph.D.
First Author Secondary Information:	
Other Authors:	Adam Fruehling, Ph.D.
	Anurag Garg
	Xiaoguang Liu, Ph.D.
	Dimitrios Peroulis, Ph.D.
Order of Authors Secondary Information:	
Abstract:	Mechanically underdamped electrostatic fringing-field MEMS actuators are well known for their fast switching operation in response to a unit step input bias voltage. However, the tradeoff for the improved switching performance is a relatively long settling time to reach each gap height in response to various applied voltages. Transient applied bias waveforms are employed to facilitate reduced switching times for electrostatic fringing-field MEMS actuators with high mechanical quality factors. Removing the underlying substrate of the fringing-field actuator creates the low mechanical damping environment necessary to effectively test the concept. The removal of the underlying substrate also has substantial improvement on the reliability performance of the device in regards to failure due to stiction. Although DC-dynamic biasing is useful in improving settling time, the required slew rates for typical MEMS devices may place aggressive requirements on the charge pumps for fully-integrated on-chip designs. Additionally, there may be challenges integrating the substrate removal step into the back-end-of-line of commercial CMOS processing steps. Experimental validation of fabricated actuators demonstrates an improvement of 50x in switching time when compared to conventional step biasing results. Compared to theoretical calculations, the experimental results are in good agreement.
Author Comments:	Editorial comments: * There are a few sections of your manuscript that show significant overlap with your

	previously published work. These sections include those indicated by the red font in
	the attached manuscript. Please re-write that text to avoid plagiarism (including self-plagiarism). We understand that there may be a limited number of ways to describe a complex technique such as yours, but you must use original language throughout the manuscript.
	-These sections have been re-written with original language and are highlighted in the revision.
	* Protocol text: 1) Please make sure every step is in the imperative tense as if you are telling someone how to do the technique (i.e. "Do this", "Measure that" etc.)
	-Every step in the protocol has been changed to the imperative tense. The changes are highlighted in the revision.
	2) If you are re-using figures from a previous publication, you must obtain explicit permission to re-use the figure from the previous publisher (this can be in the form of a letter from an editor or a link to the editorial policies that allows you to re-publish the figure) and you must cite the figure appropriately in the figure legend, i.e. "This figure has been modified from [citation]."
	-There was a misunderstanding in reading the contract with the previous publisher. It states that the figures can be reused, but only for personal publications and personal websites where a third party is not involved. Therefore, all new figures were created with a different format, organization, sequence, and style of presentation.
	3) Please provide more information/descriptions for the highlighted steps. For example, could you describe in detail what is meant by "prepare" in steps 2.1 and 2.2.
	-The steps in the X.X format are the headers for the steps in the X.X.X. format. In other words, the X.X.X steps is the detailed description of the X.X header. The protocol was reorganized to make this point a clearer. Words like "prepare" are replaced with sufficiently descriptive text. These changes are highlighted in the revision.
Additional Information:	
Question	Response
If this article needs to be "in-press" by a certain date to satisfy grant requirements, please indicate the date below and explain in your cover letter.	
If this article needs to be filmed by a certain date to due to author/equipment/lab availability, please indicate the date below and explain in your cover letter.	

May 30, 2013

Journal of Visualized Experiments 17 Sellers Street Cambridge, MA, 02139

To whom it may concern:

I am writing as a notification of the submission of our manuscript entitled, "Real-time DC-dynamic biasing method for switching time improvement in severely underdamped fringing-field electrostatic MEMS actuators," for consideration for publication in Journal of Visualized Experiments. Daniel Ljungberg, Associate Editor for the physical sciences, contacted me regarding an existing publication and suggested that we submit an article that focuses on the experimental section of the paper. The method described in this manuscript permits users to accurately replicate a dynamic waveform that electronically improves the switching time of microelectromechanical systems (MEMS) actuators with low squeeze film damping conditions. The real-time measurement and waveform parameter optimization of the method makes this work well suited for the Journal of Visualized Experiment's unique multimedia format.

The author contributions are as follows: Joshua Small devised the fabrication process for the fringing-field electrostatic MEMS actuators and the DC-dynamic biasing idea for improving the switching time; Adam Fruehling developed and fine tuned the deployment of the biasing waveform; Anurag Garg contributed to the fabrication of the fringing-field MEMS actuators; Xiaoguang Liu contributed to the fixed-fixed beam fabrication; Dimitrios Peroulis is the principal investigator for the project.

An article that details the modeling, design, and experimental validation of the DC-dynamic waveform has been accepted and published in the Journal of Micromechanics and Microengineering. However, the details of the experimental validation are not delved into in great detail. A copy of this manuscript is included with this submission.

The following peer reviewers are suggested to review this work: **Prof. Gabriel Rebeiz,** University of California San Diego, grebeiz@ucsd.edu; **Dr. Charles Goldsmith**, MEMtronics Corporation, cgoldsmith@memtronics.com; **Prof. Pierre Blondy**, University of Limoges, pierre.blondy@xlim.fr; **Prof. Ioannis "John" Papapolymerou**, Georgia Institute of Technology, ioannis.papapolymerou@ece.gatech.edu; **Prof. N. Scott Barker**, University of Virginia, barker@virginia.edu; **Prof. Kamran Entesari**, Texas A&M University, kentesar@ece.tamu.edu.

This manuscript describes original work. All authors approve the manuscript and this submission.

Thank you for receiving our manuscript and considering it for review. We appreciate your time and look forward to your response.

Sincerely,
Joshua Small, Ph.D.
Research Engineer
University of California Davis
One Shields Avenue
Kemper 2064
Davis, CA, 95616
240-925-1479
jasmall@ucdavis.edu

Title: Real-time DC-dynamic biasing method for switching time improvement in severely underdamped fringing-field electrostatic MEMS actuators

Authors:

Small, Joshua
Department of Electrical and Computer Engineering
University of California Davis
Davis, CA 95616, USA
jasmall@ucdavis.edu

Fruehling, Adam
Digital Light Projection (DLP) Technology Development
Texas Instruments
Dallas, TX 75266-0199, USA
adam.fruehling@gmail.com

Garg, Anurag
Birck Nanotechnology Center and the Department of Electrical and Computer Engineering
Purdue University
West Lafayette, IN 47906, USA
garg@purdue.edu

Liu, Xiaoguang
Department of Electrical and Computer Engineering
University of California Davis
Davis, CA 95616, USA
lxgliu@ucdavis.edu

Peroulis, Dimitrios
Birck Nanotechnology Center and the Department of Electrical and Computer Engineering
Purdue University
West Lafayette, IN 47906, USA
dperouli@purdue.edu

CORRESPONDING AUTHOR: Joshua Small

KEYWORDS: Microelectromechanical systems, actuators, switching time, settling time, electrostatic devices, micromachining, thin film devices

SHORT ABSTRACT:

The robust device design of fringing-field electrostatic MEMS actuators results in inherently low squeeze-film damping conditions and long settling times when performing switching operations using conventional step biasing. Real-time switching time improvement with DC-dynamic waveforms reduces the settling time of fringing-field MEMS actuators when transitioning between up-to-down and down-to-up states.

LONG ABSTRACT:

Mechanically underdamped electrostatic fringing-field MEMS actuators are well known for their fast switching operation in response to a unit step input bias voltage. However, the tradeoff for the improved switching performance is a relatively long settling time to reach each gap height in response to various applied voltages. Transient applied bias waveforms are employed to facilitate reduced switching times for electrostatic fringing-field MEMS actuators with high mechanical quality factors. Removing the underlying substrate of the fringing-field actuator creates the low mechanical damping environment necessary to effectively test the concept. The removal of the underlying substrate also a has substantial improvement on the reliability performance of the device in regards to failure due to stiction. Although DC-dynamic biasing is useful in improving settling time, the required slew rates for typical MEMS devices may place aggressive requirements on the charge pumps for fully-integrated on-chip designs. Additionally, there may be challenges integrating the substrate removal step into the back-end-of-line commercial CMOS processing steps. Experimental validation of fabricated actuators demonstrates an improvement of 50x in switching time when compared to conventional step biasing results. Compared to theoretical calculations, the experimental results are in good agreement.

INTRODUCTION:

Microelectromechanical systems (MEMS) utilize several actuation mechanisms to achieve mechanical displacement. The most popular are thermal, piezoelectric, magnetostatic, and electrostatic. For short switching time, electrostatic actuation is the most popular technique^{1,2}. In practice, critically-damped mechanical designs deliver the best compromise between initial rise time and settling time. Upon applying the DC bias and actuating the membrane down towards the pull-down electrode, the settling time is not a significant issue as the membrane will snap down and adhere to the dielectric coated actuation electrode. Several applications have benefited from the aforementioned electrostatic actuation design³⁻⁸. However, the presence of the dielectric coated pull-down electrode makes the actuator susceptible to dielectric charging and stiction.

MEMS membranes can utilize an underdamped mechanical design to achieve a fast initial rise time. An example of an underdamped mechanical design is the electrostatic fringing-field actuated (EFFA) MEMS. This topology has exhibited far less vulnerability to typical failure mechanisms that plague electrostatic based designs9⁻²⁰. The absence of the parallel counter electrode and consequently the parallel electric field is why these MEMS are appropriately

called "fringing-field" actuated (Figure 1). For the EFFA design, the pull-down electrode is split into two separate electrodes that are positioned laterally offset to the moving membrane, completely eliminating the overlap between the movable and stationary parts of the device. However, the removal of the substrate from beneath the movable membrane significantly reduces the squeeze film damping component thereby increasing the settling time. Figure 2b is an example of the settling time in response to standard step biasing. Transient, or DC-dynamic applied biasing in real-time can be used to improve the settling time 20-26. Figure 2c and 2d qualitatively illustrates how a time varying waveform can effectively cancel the ringing. Previous research efforts utilize numerical methods to calculate the precise voltage and timings of the input bias to improve the switching time. The method in this work uses compact closed form expressions to calculate the input bias waveform parameters. Additionally, previous work focused on parallel plate actuation. While the structures are designed to be underdamped, squeeze-film damping is still available in this configuration. The actuation method presented in this work is fringing-field actuation. In this configuration squeeze-film damping is effectively eliminated. This represents an extreme case where the mechanical damping of the MEMS beam is very low. This paper describes how to fabricate the EFFA MEMS devices and perform the measurement to experimentally validate the waveform concept.

PROTOCOL:

- 1. Fabrication of EFFA MEMS fixed-fixed beams (See Figure 3 for summarized process).
- 1.1. UV lithography and chemical wet etch of silicon dioxide with buffered hydrofluoric acid (CAUTION²⁷).
- 1.1.1. Use an oxidized, low resistivity silicon substrate.
- 1.1.2. Fill a glass beaker with acetone (enough to submerge the sample), place the sample in the acetone filled beaker, and sonicate for 5 min in a water bath sonicator (CAUTION²⁸)
- 1.1.3. Without drying, directly transfer the sample from the acetone beaker to a beaker filled with isopropyl alcohol and sonicate for 5 min in a water-bath sonicator (CAUTION²⁹).
- 1.1.4. Dry the sample with nitrogen (do not allow the isopropyl alcohol to evaporate from the surface).
- 1.1.5. Dry (dehydration bake) the sample on a hotplate set to 150 $^{\rm o}$ C for 10 min. Allow the sample to reach room temperature once the dehydration bake is complete.
- 1.1.6. Place the sample on the chuck of a photoresist spinner. Pipette and dispense 1 mL of hexamethyldisilazane (HMDS) per 25 mm of diameter (CAUTION³⁰). Spincoat at 3500 rpm for 30 sec. Pipette and dispense 1 mL of positive photoresist per 25 mm of diameter (CAUTION³¹).

Spincoat the sample at 3500 rpm for 30 sec. Softbake the photoresist for 90 sec at 105 $^{\circ}$ C on a hotplate.

- 1.1.7. Use a mask aligner to expose the sample to UV radiation with a wavelength of 350-450 nm. Use exposure energy of 391 mJ/cm² (CAUTION³²).
- 1.1.8. Fill a glass beaker with TMAH based developer (CAUTION³³) and use enough to submerge the entire sample.
- 1.1.9. Fill a glass beaker with deionized water to quickly terminate the development to avoid overdevelopment.
- 1.1.10. Develop the sample for 12-20 seconds. Gently agitate the submerged sample.
- 1.1.11. Carefully and quickly remove the sample from the development beaker and submerge it in the rinse water beaker for 10 seconds.
- 1.1.12. Rinse the sample in a sink under running deionized water for 1-2 min.
- 1.1.13. Carefully blow dry the sample with nitrogen (Do not allow the deionized water to evaporate from the surface).
- 1.1.14. Inspect the sample under a microscope.
- 1.1.15. If necessary, repeat the development procedure with adjustments in time to avoid overdevelopment.
- 1.1.16. Use a plasma reactive ion etch (RIE) to roughen the surface to improve the surface wetting. RIE settings: 100 sccm of Ar, 100 W RF power, 50 mT chamber pressure, 1 min (CAUTION³⁴).
- 1.1.17. Fill a teflon beaker with a sufficient amount of buffered oxide etch (BOE) to cover the sample.
- 1.1.18. Fill another teflon beaker with deionized water for an intermediate rinse of the sample.
- 1.1.19. Submerge the sample in the BOE. The etch rate is 90-100 nm/min.
- 1.1.20. When the etch is complete, rinse in the teflon beaker that has deionized water for 10 sec. Then rinse the sample in a sink under running deionized water for 1-2 min.
- 1.1.21. Dry the sample with nitrogen (Do not allow the deionized water to evaporate from the surface).

- 1.1.22. Inspect the sample under a microscope.
- 1.1.23. Repeat the etch and rinse steps as necessary with adjustments in the time in order to avoid over-etching and undercutting of the photoresist.
- 1.1.24. Remove photoresist mask.
- 1.1.25. Fill a glass beaker with acetone (enough to submerge the sample), place the sample in the acetone filled beaker and sonicate in a water-bath sonicator for 5 min.
- 1.1.26. Directly take the sample from the acetone beaker and place it in an isopropyl alcohol filled beaker and sonicate for 5 min in a water-bath sonicator.
- 1.1.27. Dry the sample with nitrogen (Do not allow the isopropyl alcohol to evaporate from the surface).
- 1.2. Chemical wet etch of silicon with tetramethylammonium hydroxide (TMAH) 25 % by weight (CAUTION³⁵).
- 1.2.1. Use a clean 4 L beaker.
- 1.2.2. Use a hotplate with a thermocouple. Use a teflon basket that has a hook at the end of the handle for holding the samples. Use a magnetic stir rod for proper agitation to alleviate the silicon surface of hydrogen bubbles that are released during the bulk etching process.

NOTE: The feedback between the thermocouple and the hotplate ensures the appropriate temperature remains constant throughout the etch. If the released hydrogen is not removed from the surface, it may mask the underlying silicon from the TMAH.

- 1.2.3. Pour the TMAH 25 % by weight up to the 2 L mark of the beaker.
- 1.2.4. Place the thermocouple in the solution and preheat to 80 $^{\circ}$ C. If possible, use a custom fixture or clamp to hold the thermocouple to prevent interference with the rotation of the magnetic stir bar.
- 1.2.5. Once the solution reaches the necessary temperature, place the samples in the teflon basket and place the basket in the solution by hanging it from the lip of the beaker. Make sure that the basket does not rest on the bottom of the beaker in order to leave room for the magnetic stir rod to rotate.
- 1.2.6. Set the rotation rate of the magnetic stir bar to 400 rpm.

- 1.2.7. The etch rate of the solution is 300-350 nm/min. The necessary etch depth is 4-5 μ m.
- 1.2.8. When the necessary time has elapsed to complete the etch, remove the sample from the solution and rinse with deionized water for 1-2 min.
- 1.2.9. Dry the sample with nitrogen (Do not allow the deionized water to evaporate from the surface).
- 1.2.10. Use a profilometer to measure the step height.
- 1.2.11. If the step height has not been reached, place the samples in the solution again in order to achieve the desired step height.
- 1.3. Chemical wet etch of all SiO₂ from the substrate and thermally grow another 500 nm of SiO₂.
- 1.3.1. Fill a teflon beaker with hydrofluoric acid 49 % by volume (CAUTION³⁶). Use an amount that is sufficient to cover the sample.
- 1.3.2. Fill a teflon beaker with deionized water for rinsing the sample. Use an amount that is sufficient to cover the sample.
- 1.3.3. Etch the sample with hydrofluoric acid. Leave the sample in the solution until all of the SiO_2 is removed. Since the solution is highly concentrated, the etch will occur relatively quickly.
- 1.3.4. Rinse for 10-20 sec in the teflon beaker filled with deionized water.
- 1.3.5. Rinse the sample thoroughly under running deionized water in a sink for 1-2 min.
- 1.3.6. Mix a solution of H_2SO_4 : H_2O_2 (piranha clean: sulfuric acid and hydrogen peroxide mix) in a 1:1 ratio in a teflon beaker (CAUTION³⁷). Use enough to cover the sample.
- 1.3.7. Fill a teflon beaker with deionized water for rinsing the sample.
- 1.3.8. Submerge the sample in the H₂SO₄:H₂O₂ for 7-10 min.
- 1.3.9. Briefly, 10 sec, rinse the sample in the rinse water beaker.
- 1.3.10. Thoroughly rinse the sample in a sink under running deionized water for 1-2 min.
- 1.3.11. Dry the sample with nitrogen (Do not allow the water to evaporate from the surface).
- 1.3.12. Perform wet thermal oxidation to grow 500 nm of SiO₂.

- 1.4. UV lithography and chemical wet etch to pattern the SiO₂ to expose the silicon which serves as the sacrificial layer for the final release of the fixed-fixed beams.
- 1.4.1. Fill a glass beaker with acetone (enough to submerge the sample), place the sample in the acetone filled beaker and sonicate in a water-bath sonicator for 5 min.
- 1.4.2. Directly take the sample from the acetone beaker and place it in an isopropyl alcohol filled beaker and sonicate in a water-bath sonicator for 5 min.
- 1.4.3. Dry the sample with nitrogen (Do not allow the isopropyl alcohol to evaporate from the surface).
- 1.4.4. Dry (dehydration bake) the sample on a hotplate set to 150 $^{\circ}$ C for 10 min. Allow the sample to reach room temperature once the dehydration bake is complete.
- 1.4.5. Using a photoresist spincoater, spincoat HMDS on the sample at 3500 rpm for 30 sec. Using a photoresist spincoater, spincoat positive photoresist on to the sample at 3500 rpm for 30 sec. Softbake the photoresist for 90 sec at 105 °C on a hotplate.

NOTE: Use 1 mL per every 25 mm of sample diameter.

- 1.4.6. Use a mask aligner to expose the sample to UV radiation with a wavelength of 350-450 nm. Use exposure energy of 391 mJ/cm².
- 1.4.7. Fill a glass beaker with a TMAH based developer and use enough to submerge the entire sample.
- 1.4.8. Fill a glass beaker with deionized water to quickly terminate the development to prevent overdevelopment.

1.4.9. Develop the sample for 12-20 sec.

- 1.4.10. Carefully and quickly remove the sample from the development beaker and submerge it in the rinse water beaker for 10 sec.
- 1.4.11. Rinse the sample in a sink under running deionized water for 1-2 min.
- 1.4.12. Carefully dry with nitrogen (Do not allow the water to evaporate from the surface).
- 1.4.13. Inspect the sample under a microscope.

- 1.4.14. If necessary, repeat the development procedure with adjustments in time to avoid overdevelopment.
- 1.4.15. Use plasma RIE to roughen the surface to improve the surface wetting. RIE settings: 100 sccm of Ar, 100 W RF power, 50 mT chamber pressure, 1 min.
- 1.4.16. Fill a teflon beaker with a sufficient amount of BOE to cover the sample.
- 1.4.17. Fill a teflon beaker with deionized water for an intermediate rinse of the sample.
- 1.4.18. Submerge the sample in the BOE. The etch rate is 90-100 nm/min.
- 1.4.19. When the etch is complete, rinse in the teflon beaker that has deionized water for 10 sec. Then rinse the sample under running deionized water in a sink for 1-2 min.
- 1.4.20. Dry the sample with nitrogen (Do not allow the water to evaporate from the surface).
- 1.4.21. Inspect sample under a microscope.
- 1.4.22. Repeat the etch and rinse steps as necessary with adjustments in the time in order to avoid over-etching and undercutting of the photoresist.
- 1.4.23. Fill a glass beaker with acetone (enough to submerge the sample), place the sample in the acetone filled beaker, and sonicate in a water-bath sonicator for 5 min.
- 1.4.24. Directly take the sample from the acetone beaker and place it in an isopropyl alcohol filled beaker and sonicate in a water-bath sonicator for 5 min.
- 1.4.25. Dry the sample with nitrogen (Do not allow the isopropyl alcohol to evaporate from the surface).
- 1.5. Sputter deposit 20 nm of Ti and 100 nm of Au. This film serves as the electroplating seed layer for the subsequent electroplating process step. The sputtering parameters are: DC power of 100 W, deposition pressure of 8 mT, 100 sccm of Ar, base pressure 3 E⁻⁶ T.
- 1.5.1. Vent the process chamber or load lock to atmosphere.
- 1.5.2. Load the sample into the process chamber or load lock.
- 1.5.3. Pump the process chamber or load lock to vacuum.
- 1.5.4. Wait until the process chamber achieves a base pressure of 3 E^{-6} T.

- 1.5.5. Position the sample to the appropriate place for deposition.
- 1.5.6. Set the chamber pressure to 8 mT by flowing argon into the system. The exact flow rate needed to achieve 8 mT highly dependent on the type of system used. The sputtering tool used for this work used a flow rate of 100 sccm.
- 1.5.7. Activate the source with the titanium target.
- 1.5.8. Presputter titanium at 300 W for 20 mins.
- 1.5.9. Sputter 20 nm of titanium at 100 W. The exact time of the deposition is highly dependent on the type of system use. For the sputtering tool used in this work, 5 mins is necessary to achieve 20 nm.
- 1.5.10. Deactivate the source with the titanium sputtering target.
- 1.5.11. Activate the source with the gold target.
- 1.5.12. Presputter gold at 100 W for 2 mins.
- 1.5.13. Sputter 100 nm of gold at 100 W. The exact deposition time is highly dependent on the sputtering tool that is used. For the sputtering tool used in this work, 10 minutes is enough to provide 100 nm of gold.
- 1.5.14. Deactivate the source with the gold sputtering target.
- 1.5.15. Close the Ar gas valve.
- 1.5.16. Vent the process chamber or load lock.
- 1.5.17. Unload the sample once the process chamber or load lock reaches atmosphere.
- 1.5.18. Pump the load lock or process chamber down to high vacuum.

1.6. UV lithography to create a photoresist mold that defines the geometry of the fixed-fixed beam.

- 1.6.1. Fill a glass beaker with acetone (enough to submerge the sample), place the sample in the acetone filled beaker for 5 min.
- 1.6.2. Directly take the sample from the acetone beaker and place it in an isopropyl alcohol filled beaker for 5 min.

- 1.6.3. Dry the sample with nitrogen (Do not allow the isopropyl alcohol to evaporate from the surface).
- 1.6.4. Dry (dehydration bake) the sample on a hotplate set to 150 $^{\circ}$ C for 10 min. Allow the sample to reach room temperature once the dehydration bake is complete.
- 1.6.5. Using a photoresist spincoater, spincoat HMDS on the sample at 3500 rpm for 30 sec. Using a photoresist spincoater, spincoat positive photoresist on to the sample at 2000 rpm for 30 sec. Softbake the photoresist for 90 sec at 105 °C on a hotplate.

NOTE: Use 1 mL per every 25 mm of sample diameter.

- 1.6.6. Use a mask aligner to align and expose the sample to UV radiation with a wavelength of 350-450 nm. Use an exposure energy of 483 mJ/cm².
- 1.6.7. Fill a glass beaker with TMAH based developer and use enough to submerge the entire sample.
- 1.6.8. Fill a glass beaker with deionized water to quickly terminate the development in order to prevent overdevelopment.
- 1.6.9. Develop the sample for 12-20 seconds.
- 1.6.10. Carefully and quickly remove the sample from the development beaker and submerge it in the rinse water beaker for 10 seconds.
- 1.6.11. Rinse the sample in a sink under running deionized water for 1-2 min.
- 1.6.12. Dry the sample with nitrogen (Do not allow the water to evaporate from the surface).
- 1.6.13. Inspect the sample under a microscope.
- 1.6.14. If necessary, repeat the development procedure with adjustments in time to avoid overdevelopment.

1.7. Electroplate gold MEMS beam.

- 1.7.1. Use a 1 L beaker glass beaker.
- 1.7.2. Fill beaker with 700 mL of a commercially-available, ready-to-use gold electroplating solution (CAUTION³⁸). Place filled beaker on a hotplate.

- 1.7.3. Set the hotplate to 60 $^{\circ}$ C. Use a thermocouple to ensure that the solution stays at the desired temperature. Once the solution has reached the desired temperature, attach the sample to a fixture that holds the anode, workpiece (the sample), and the thermocouple.
- 1.7.4. Set the current supply to the appropriate amplitude based on the exposed metalized area of the sample. A constant current density of 2 mA/cm² is used.
- 1.7.5. A stainless steel anode is used.
- 1.7.6. Connect the live to the anode and the ground to the sample.
- 1.7.7. The deposition rate is 250-300 nm/min. The final thickness of the fixed-fixed beam is 0.5 μ m. Taking into consideration that an approximate 4:1 ratio exists in the etch rates of electroplated to sputtered gold (when removing the sputtered seed layer), the beam is electroplated to 1 μ m.
- 1.7.8. When the necessary time has elapsed, turn off the current supply, disconnect the leads from the anode and workpiece, remove the sample, and rinse thoroughly under running deionized water in a sink for 1 min.
- 1.7.9. Blow dry the sample with nitrogen (Do not allow the water to evaporate from the surface).
- 1.7.10. Use a microscope and profilometer to verify that the electroplating is complete.

1.8. Etch the photoresist mold.

- 1.8.1. Preheat glass beaker filled with a dedicated photoresist stripper on a hotplate to 110 $^{\circ}$ C (CAUTION³⁹). Submerge sample in the solution for 1 hr.
- 1.8.2. Remove the beaker from hotplate and allow the solution and sample to reach room temperature.
- 1.8.3. Rinse sample thoroughly under running water in a sink for 1-2 min.
- 1.8.4. Submerge sample in a beaker filled with acetone for 5 min.
- 1.8.5. Submerge sample in a beaker filled with isopropyl alcohol for 5 min.
- 1.8.6. Dry the sample with nitrogen (Do not allow the isopropyl alcohol to evaporate from the surface).

1.8.7. Inspect sample under a microscope and measure the step height of the electroplated Au with a profilometer. Repeat the cleaning steps if necessary.

1.9. Chemical wet etch Ti/Au seed layer.

- 1.9.1. Place sample in plasma RIE and use the following parameters: 100 sccm of Ar, 100 W, 50 mT for 30 sec
- 1.9.2. Fill a teflon or glass beaker with Au etchant (CAUTION 40). Use enough to cover the entire sample.
- 1.9.3. Fill a teflon or glass beaker with deionized water. This beaker will serve as an intermediate rinse beaker to quickly terminate the Au etch.
- 1.9.4. Submerge the sample in the Au etchant. Etch parameters room temperature, 7-8 nm/sec, agitated. Once etch is complete, submerge the sample in the rinse water beaker and gently agitate for 10-20 sec.
- 1.9.5. Rinse the sample thoroughly under running deionized water in a sink for 1-2 min.
- 1.9.6. Nitrogen blow dry (Do not allow the water to evaporate from the surface)
- 1.9.7. Inspect the etch under a microscope and, if necessary, repeat until all the Au is removed from the exposed areas.
- 1.9.8. Perform plasma RIE again on the sample with the following parameters: 100 sccm of Ar, 100 W, 50 mT for 30 sec
- 1.9.9. Fill a teflon beaker with BOE (enough to submerge the sample).
- 1.9.10. Fill a teflon with deionized water for rinsing the sample.
- 1.9.11. Submerge the sample in the BOE at room temperature. The etch rate is 15-18 nm/min. When the etch time is complete, remove the sample from the beaker and submerge it into the rinse beaker for 10-20 sec.
- 1.9.12. Rinse the sample thoroughly under running deionized water in a sink for 1-2 min.
- 1.9.13. Nitrogen blow dry (Do not allow the water to evaporate from the surface).
- 1.9.14. Inspect etch and, if necessary, repeat until all the titanium is removed from the exposed areas. Reduce the etch time to avoid significant undercutting.

1.10. Perform a dry isotropic XeF₂ etch (CAUTION⁴¹) that selectively removes the silicon and releases the Au fixed-fixed beams.

- 1.10.1. Vent the process chamber to atmosphere.
- 1.10.2. Load the sample in the process chamber.
- 1.10.3. Pump the system down to vacuum.
- 1.10.4. The etch time strongly depends on the exposed area and the type of etch system used. For this sample a pressure of 3 T with a 30 sec cycle is used. 10 cycles are used. An etch rate of 110-120 nm/min is extracted.
- 1.10.5. Once the etch parameter are set in the system, etch the silicon sacrificial layer.
- 1.10.6. When the etch is complete perform the necessary purging steps to ensure toxic gases are removed before venting the system to atmosphere. The system in this study has a process that automatically performs this purge step.
- 1.10.7. Vent the process chamber to atmosphere.
- 1.10.8. Carefully remove the samples.
- 1.10.9. Pump the process chamber down to vacuum.

2. Experimental Validation of Dynamic Waveform

- 2.1. Load sample on DC probe station.
- 2.1.1. Place the sample on the chuck of the DC probe station.
- 2.1.2. Activate the vacuum of the chuck to hold the sample down.
- 2.1.3. Use DC probe tip manipulators to position the tungsten probe tips on the biasing pads of the MEMS bridges
- 2.1.4. Use the microscope of the DC probe station to view the precise positioning of the tungsten probe tips over the DC biasing pads of the device. The fixed-fixed beam is probed with the live signal probe tip while the pull down electrodes are probed with the ground probe tip.
- 2.2. Program dynamic biasing signal on the function generator.

- 2.2.1. Use calculated values for the initial wave parameters²⁰.
- 2.2.2. Choose the arbitrary waveform function on the function generator to create the dynamic waveform.
- 2.2.3. Input the time parameters of the waveform. Depending on the type of function generator, the first time parameter starts after few microseconds (as opposed to 0 microseconds). The interval between the first and second time parameter will be the calculated time it will take the beam to reach the overshoot gap. The interval between the second and third time parameter should be long enough to allow the beam to completely reach equilibrium with minimal oscillation. When inputting the time parameters to operate in the reverse direction (from pull-down to release), the overshoot gap time will determine the time interval between the third time parameter and turning off the. There will be a fifth time interval need to restart the wave. For this interval permit sufficient time for the beam to reach equilibrium before restarting the cycle.
- 2.2.4. Input the voltage parameters of the waveform. The voltages will be a fraction of the actual voltage applied to the beam because this signal will pass through a linear amplifier. The values programmed into the function generator for this study were 1/20 of the actual voltage.
- 2.2.5. Connect the output of the function generator to the high-speed high-voltage linear amplifier.
- 2.2.6. Connect the output of the linear amplifier to a digital oscilloscope with sampling rate of 300 MHz. The oscilloscope is used to verify the signal output from the arbitrary waveform generator.
- 2.2.7. Connect the output of the linear amplifier to the DC manipulators. Make sure the function generator is off while performing this step.

2.3. Setup and measure with the Laser Doppler vibrometer (LDV)

- 2.3.1. Position the head that holds the LDV over the sample.
- 2.3.2. Turn on the laser.
- 2.3.3. Use the microscope that is integrated with the LDV to find the desired beam to measure.
- 2.3.4. Focus the laser on the center of the MEMS bridge. This is the point of maximum deflection.
- 2.3.5. Ensure the intensity of the laser beam reflection is sufficient for accurate measurement.

- 2.3.6. Set the sampling time to the appropriate sampling rate. This measurement uses a sampling rate of 5.1 MHz.
- 2.3.7. Select the displacement versus time output for the LDV.
- 2.3.8. Select the continuous measurement mode.
- 2.3.9. Apply the biasing signal on the MEMS bridges. The LDV will capture the ringing effect in real-time.
- 2.3.10. Tune the timing and voltage parameters on the function generator to achieve minimal beam oscillation on the pull-down and release operations.
- 2.3.11. Once the optimal values are found turn off the biasing signal.
- 2.3.12. Turn off the continuous LDV measurement mode.
- 2.3.13. Lift the DC probe tips up from the biasing pads.
- 2.3.14. Connect the triggering input of the function generator to the triggering output of the LDV hardware interface. For this study a BNC cable is used for this connection.
- 2.3.15. Set the function generator to acknowledge the external trigger from the LDV system.
- 2.3.16. Set the LDV software to trigger the function generator when the measurement scan mode begins.
- 2.3.17. Set the LDV software to single scan mode. The time single scan will be the duration of the waveform.
- 2.3.18. Drop the DC probe tips back down on the biasing pads of the MEMS bridge.
- 2.3.19. Capture the signal scan by activating the measurement mode of the LDV.
- 2.3.20. Save the displacement versus time data.

REPRESENTATIVE RESULTS:

The setup in Figure 4 is used to capture the deflection versus time characteristics of the MEMS bridges. By using the laser doppler vibrometer in its continuous measurement mode, the precise voltage and time parameters can be found to result in minimum beam oscillation for the desired gap height. Figure 5 illustrates an example beam deflection corresponding to the 60 V gap height. It is seen that virtually all of the oscillation is removed. Not only is the dynamic waveform useful for one gap height, but for all of the gap possible heights. This is demonstrated in Figure 6 and Figure 7 for both the pull-down and release operations, respectively. The calculated and measured dynamic wave form used to achieve the measurements in the previous figures is presented in Figure 8 and 9, respectively.

Figure Legends:

- **Figure 1.** 2D sketch and SEM image of MEMS bridges used in this study. (a) 2D profile. (b) Top view of MEMS bridges (c) SEM of actual fabricated device.
- Figure 2. Sketch of underdamped MEMS bridge in response to an input step and time varying response. (a) Unit step applied bias. (b) Response of underdamped MEMS bridge to unit step input. (c) Time varying/dynamic input bias. (d) Response of MEMS bridge to time varying input.
- Figure 3. Summarized process flow for the MEMS bridges. (a) Oxidized silicon substrate. (b) Bulk etch of silicon substrate. (c) Re-oxidation of silicon substrate. (d) Silicon dioxide etch to expose sacrificial silicon. (e) Gold deposition and patterning. (f) Etch of sacrificial silicon layer to release the MEMS bridge.
- **Figure 4.** Block diagram of the experimental setup used to apply the bias signal and capture the MEMS bridge deflection.
- **Figure 5.** Measured pull-down and release states of a MEMS bridge in response to a 60 V input bias. The black curve is the response from a step input. The red curve is the response to a dynamic input.
- **Figure 6.** Measured intermediate pull-down gap heights of the MEMS bridge in response to a dynamic input.
- **Figure 7.** Measured intermediate release gap heights of the MEMS bridge in response to a dynamic input.
- **Figure 8.** Calculated waveform for the input bias.
- **Figure 9.** Actual waveform used to achieve minimum oscillation of the MEMS bridge.

Table 1. Table of chemicals.

Table 2. Table of equipment.

DISCUSSION:

Low residual stress Au film deposition and a dry release with XeF₂ are critically components in the successful fabrication of the device. Electrostatic fringing-field actuators provide relatively low forces when compared to parallel-plate field actuators. Typical MEMS thin film stresses of > 60 MPa will result in excessively high drive voltages which can potentially compromise the reliability of EFFA MEMS. For this reason the electroplating recipe is carefully characterized to yield a thin film with low bi-axial mean stress. Additionally, this study uses silicon as the sacrificial layer type due to its relative lack of expansion and contraction (compared to photoresist) during process steps that require heat cycles. Finally, the dry release step with XeF₂ facilitates high yield processing by virtually eliminating stiction.

The desired beam gap height corresponds to the overshoot gap height (Figure 2b) in response to the first step bias²⁰. Once the beam attains the overshoot/desired gap height the second step bias (Figure 2c) is applied to hold the beam in this position. By knowing the mechanical quality factor of the MEMS bridge (which can be measured or calculated), the overshoot percentage and the time to reach the overshoot gap height can be calculated. These parameters are used to determine the amplitude and timing of the input voltage.

DC-dynamic drive signals used in this study improved the settling time from $^{\sim}$ 2 ms down to $^{\sim}$ 35 µs for both up-to-down and down-to-up states. The calculated switching time using the heuristic model is 28 µs for a beam with width w=10 µm, length L=400 µm, thickness t=0.45 µm, lateral pull-down gap s=8 µm, and residual tensile mean stress $\sigma=5$ MPa. Switching time has a $\sigma^{-1/2}$ relationship. The consequence of this relationship is that relatively small variations in the residual stress can have a non-marginal impact on the switching time calculation. A relatively small difference of 2 MPa in residual stress can result in a switching time variation of 20 %. Therefore a need exists for real-time optimization with the method presented in this paper due to the inevitability of process variation across a wafer.

The method presented in this work demonstrates significant improvements in switching time for electrostatic fringing field actuators where the substrate is removed. The details for fabrication of the EFFA MEMS tuners and the electrical testing are described in detail. The experimental method, in particular the dynamic biasing technique, will find utility in virtually any mechanically underdamped MEMS design in regards to improving the switching time performance.

ACKNOWLEDGMENTS:

The authors wish to thank Ryan Tung for his assistance and useful technical discussions.

The authors also wish to acknowledge the assistance and support of the Birck Nanotechnology Center technical staff. This work was supported by the Defense Advanced Research Projects Agency under the Purdue Microwave Reconfigurable Evanescent-Mode Cavity Filters Study. And also by NNSA Center of Prediction of Reliability, Integrity and Survivability of Microsystems and Department of Energy under Award Number DE-FC5208NA28617. The views, opinions, and/or findings contained in this paper/presentation are those of the authors/presenters and should not be interpreted as representing the official views or policies, either expressed or implied, of the Defense Advanced Research Projects Agency or the Department of Defense.

DISCLOSURES:

The authors have nothing to disclose


REFERENCES


- 1. Rebeiz, G. RF MEMS: Theory, Design, and Technology. *John Wiley and Sons*. DOI: 10.1002/0471225282, (2003).
- 2. Senturia, S. D. Microsystem Design. Springer. DOI: 10.1007/0-306-47601, (2001).
- 3. Bouchaud, J. Propelled by HP Inkjet Sales, STMicroelectronics Remains Top MEMS Foundry. http://www.isuppli.com/MEMS-and-Sensors/News/Pages/Propelled-by-HP-Inkjet-Sales-STMicroelectronics-Remains-Top-MEMS-Foundry.aspx. (2011).
- Lantowski, K. G. D. The Future of Cinema Has Arrived: More Than 50,000 Theatre Screens Worldwide Feature The Brightest, 2D/3D Digital Cinema Experience With DLP Cinema.
 - http://www.dlp.com/technology/dlp-press-releases/press-release.aspx?id=1510. (2011).
- Bosch-Wachtel, T. Knowles Ships 2 Billionth SiSonic MEMS Microphone. http://pressrelease.smartoman.com/?p=2810. (2011).
- Burke, J. Mirasol Display Capabilities Add Color and Interactivity to Improve User Experience for Renowned Jin Yong Branded Device http://www.mirasoldisplays.com/press-center/pressreleases/ 2012/01/koobe-taiwan%E2%80%99s-leading-e-reader-manufacturer-andqualcommbring. (2012).
- Bettler, D. MEMStronics Captures Prestigious R & D 100 Award. http://www.memtronics.com/files/MEMtronics Press Release7 1 2011.pdf. (2011).
- 8. Marsh, C. Omron Releases New RF MEMS Switch with Superior High Frequency Characteristics rated to 100 Million Operations http://www.components.omron.com/components/web/pdflib.nsf/0/D69D5B6BCBE68DC2862574FD005B5141/\$file/Omron 2MES-1 PR final.pdf. (2008).
- 9. Rosa, M. A., Bruyker, D. D., Volkel, A. R., Peeters, E. and Dunec, J. A novel external electrode configuration for the electrostatic actuation of MEMS based devices. *J. Micromech. Microeng.* **14**, 446-451, DOI:10.1088/0960-1317/14/4/003, (2004).


- Rottenberg, X. et al. Electrostatic fringing-field actuator (EFFA): application towards a low-complexity thin film RF-MEMS technology. J. Micromech. Microeng. 17, S204-S210, DOI:10.1088/0960-1317/17/7/S19, (2007).
- 11. Allen, W. N., Small, J., Liu, X., and Peroulis, D. Bandwidth-optimal single shunt-capacitor matching networks for parallel RC loads of Q >> 1. *Asia-Pacific Microw. Conf.* (Singapore). 2128-2131, DOI: 10.1109/APMC.2009.5385256, (2009).
- 12. Small, J., Liu, X., Garg, A., and Peroulis, D. Electrostatically tunable analog single crystal silicon fringing-field MEMS varactors. *Asia-Pacific Microw. Conf. (Singapore).* 575-578, DOI: 10.1109/APMC.2009.5384164, (2009).
- 13. Liu, X., Small, J., Berdy, D., Katehi, L. P. B., Chappell, W. J., and Peroulis, D. Impact of mechanical vibration on the performance of RF MEMS evanescent-mode tunable resonators. *IEEE Microw. Wireless Compon. Lett.* **21,** 406-408, DOI: 10.1109/LMWC.2011.2160159, (2011).
- 14. Small, J., et al. Electrostatic fringing field actuation for pull-in free RF-MEMS analog tunable resonators. J. Micromech. Microeng. 22, 095004, DOI: 10.1088/0960-1317/22/9/095004, (2012).
- 15. Su, J. A lateral-drive method to address pull-in failure in MEMS. *Ph.D. Dissertation Dept. Elect. Comput. Eng., University of Notre Dame.* (2008).
- 16. Scott, S. and Peroulis, D. A capacitively-loaded MEMS slot element for wireless temperature sensing of up to 300°C. *IEEE MTT-S Int. Microwave Symp. Dig. (Boston, MA, USA).* 1161-1164, DOI: 10.1109/MWSYM.2009.5165908, (2009).
- 17. Scott, S., Sadeghi, F., and Peroulis, D. Inherently-robust 300C MEMS sensor for wireless health monitoring of ball and rolling element bearings. *IEEE Sensors (Christchurch, New Zealand)*. 975-978, DOI: 10.1109/ICSENS.2009.5398204, (2009).
- 18. Lee, K. B. Non-contact electrostatic microactuator using slit structures: theory and a preliminary test. *J. Micromech. Microeng.* **17**, 2186-96, DOI:10.1088/0960-1317/17/11/004, (2007).
- 19. Su, J., Yang, H., Fay, P., Porod, W., and Berstein, G. H. A. surface micromachined offset-drive method to extend the electrostatic travel range. *J. Micromech. Microeng.* **20**, 015004, DOI: 10.1088/0960-1317/20/1/015004, (2010).
- 20. Small, J., A. Fruehling, A., Garg, A., Liu, X., and Peroulis, D. DC-dynamic biasing for >50x switching time improvement in severely underdamped fringing-field electrostatic MEMS actuators. *J. Micromech. Microeng.* 22, DOI: 10.1088/0960-1317/22/12/125029, (2012).
- 21. Borovic, B., Liu, A. Q., Popa, D., Cai, H. and Lewis, F. L. Open-loop versus closed-loop control of MEMS devices: Choices and issues. *J. Micromech. Microeng.* **15**, 1917-24, DOI: 10.1088/0960-1317/15/10/018, (2005).
- 22. Pons-Nin, J., Rodriquez, A., and Castaner, L. M. Voltage and pull-in time in current drive of electrostatic actuators. *J. Microelectromech. Syst.* **11**, 196-205, DOI: 10.1109/JMEMS.2002.1007398, (2002).
- 23. Czaplewski, D. A., et al. A Soft Landing Waveform for Actuation of a Single-Pole Single-Throw Ohmic RF MEMS Switch. *J. Microelectromech. Syst.* **15**, 1586-1594, DOI: 10.1109/JMEMS.2006.883576, (2006).


- 24. Elata, D., and Bamberger, H. On the dynamic pull-in of electrostatic actuators with multiple degrees of freedom and multiple voltage sources. *J. Microelectromech. Syst.* **15**, 131-40, DOI: 10.1109/JMEMS.2005.864148, (2006).
- 25. Chen, K –S., and Ou, K –S. Fast positioning and impact minimizing of MEMS devices by suppression motion-induced vibration by command shaping method. *Proc. IEEE 22nd Int. Conf. Micro Electro Mech. Syst. (Sorrento, Italy)* 1103-1106, DOI: 10.1109/MEMSYS.2009.4805580, (2009).
- 26. Chen, K –S., Yang, T –S., and Yin, J –F. Residual vibration suppression for duffing nonlinear systems with electromagnetical actuation using nonlinear command shaping techniques. *ASME J. Vibration and Acoustics.* **128**, 778-789, DOI: 10.1115/1.2203340, (2006).
- 27. Buffered oxide etchant; MSDS No. B5636 [Online]; Mallinckrodt Baker, Inc.: Phillipsburg, NJ, Septemeber 14, 2009. http://nrf.aux.eng.ufl.edu/files/msds/299.pdf, (accessed March 27, 2013).
- 28. *Acetone*; MSDS No. A0446 [Online]; Mallinckrodt Baker, Inc.: Phillipsburg, NJ, April 10, 2001. http://www.clean.cise.columbia.edu/msds/acetone.pdf, (accessed March 37, 2013).
- 29. *Isopropyl alcohol*; MSDS No. BDH-140 [Online]; Honeywell: Muskegon, MI, December 29, 2005. http://grice.cofc.edu/pdf/MSDS/Rm205/Plante/Isopropyl%20Alcohol%2099%25.pdf, (accessed March 27, 2013).
- 30. *Hexamethlydisilazane*; MSDS No. H2066 [Online]; Mallinckrodt Baker, Inc.: Phillipsburg, NJ, June 13, 2007. http://kni.caltech.edu/facilities/msds/hmds.pdf, (accessed March 27, 2013).
- 31. *Microposit SC 1827 Positive Photoresist*; [Online]; Rohm and Haas Electronic Materials LLC: Marlborough, MA, April 2, 2004. http://mfc.engr.arizona.edu/safety/MSDS%20FOLDER/Microposit%20SC%201827%20Photoresist.pdf, (accessed March 27, 2013).
- 32. SUSS MJB 3 mask aligner operator's reference manual rev A; [Online]; Karl Suss, http://www.acsu.buffalo.edu/~btvu/doc/cr/Suss%20MJB-3%20Operator's%20Manual.pdf, (accessed March 27, 2013).
- 33. *Microposit MF-26A developer*; [Online]; Shipley Europe Ltd.: Coventry, UK, April 7, 2000. http://www.nanotech.wisc.edu/CNT_LABS/MSDS/Developers/MSDS%20MF26A.pdf, (accessed March 27, 2013).
- 34. Technics 800 Micro RIE Operating Manual; [Online]; http://ncnc.engineering.ucdavis.edu/pages/equipment/Technics800RIE.pdf, (accessed March 27, 2013).
- 35. Tetramethylammonium hydroxide; MSDS No. 334901 [Online]; Sigma-Aldrich: Saint Loius, MO, December 12, 2012. http://www.sigmaaldrich.com/MSDS/MSDS/DisplayMSDSPage.do?country=US&languag e=en&productNumber=334901&brand=SIAL&PageToGoToURL=http%3A%2F%2Fwww.sigmaaldrich.com%2Fcatalog%2Fproduct%2Fsial%2F334901%3Flang%3Den, (accessed March 27, 2013).


- 36. *Hydrofluoric acid*; [Online]; Sciencelab.com, Inc.: Houston, TX, June 9, 2012. http://www.sciencelab.com/msds.php?msdsId=9924296, (accessed March 27, 2013).
- 37. *Piranha clean*; [Online]; Tufts University Standard Operating Procedure: January 12, 2007. http://engineering.tufts.edu/microfab/index-files/SOP/PiranhaClean SOP.pdf, (accessed March 27, 2013).
- 38. *Transene Sulfite Gold TSG-250*; Product Number: 110-TSG-250; Transene Company: Danvers, MA, January 2012.
- 39. Baker PRS-3000™ Positive Resist Stripper; MSDS No. B0203 [Online]; Mallinckrodt Baker, Inc.: Phillipsburg, NJ, October 31 2001. http://mcf.tamu.edu/docs/msds-pdfs/BAKER-PRS-3000.pdf, (accessed March 28, 2013).
- 40. *Gold etchant type TFA*; Product Number: 060-0015000; Transene Company: Danvers, MA, January 2012.
- 41. Xenon Difluoride Etching System; Lab manual Chapter 7.5 [Online]; Marvell Nanofabrication Laboratory: Berkeley, CA, October 2003. http://nanolab.berkeley.edu/labmanual/chap7/7.5xetch.pdf, (accessed March 27, 2013).
- 42. Garg, A., Small, J., Mahapatro, A., Liu, X., and Peroulis, D. Impact of sacrificial layer type on thin film metal residual stress. *IEEE Sensors (Christchurch, New Zealand)*. 1052-1055, DOI: 10.1109/ICSENS.2009.5398591, (2009).

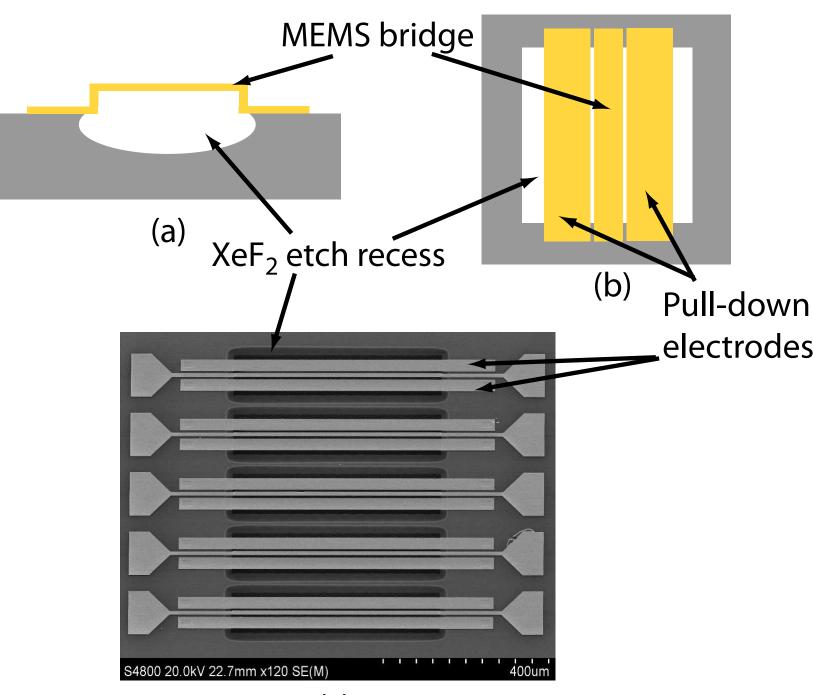


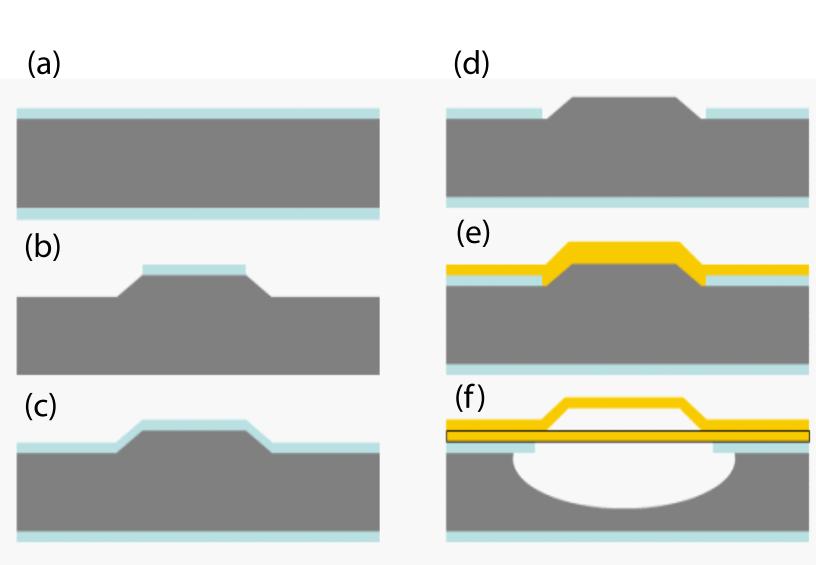


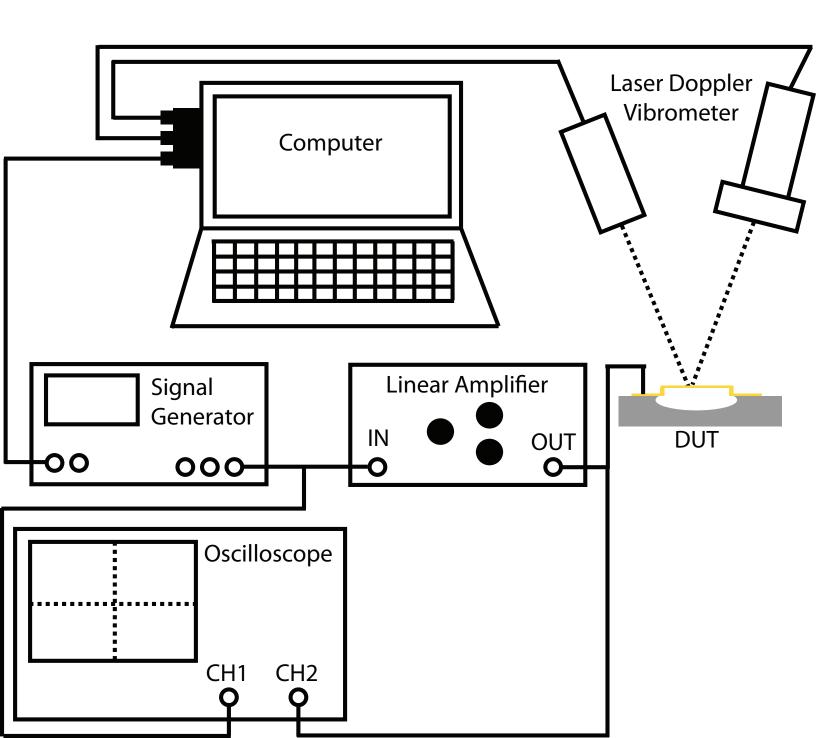


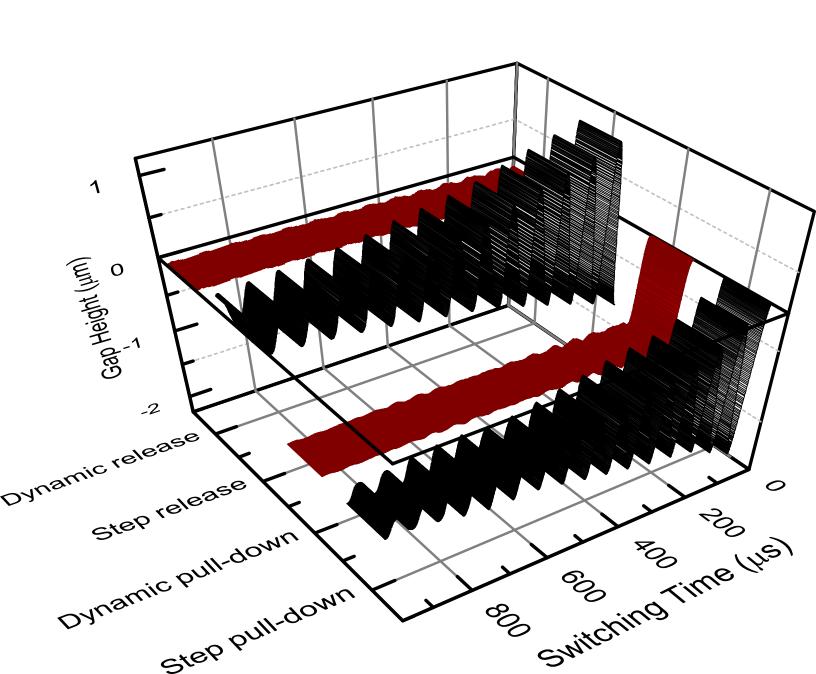


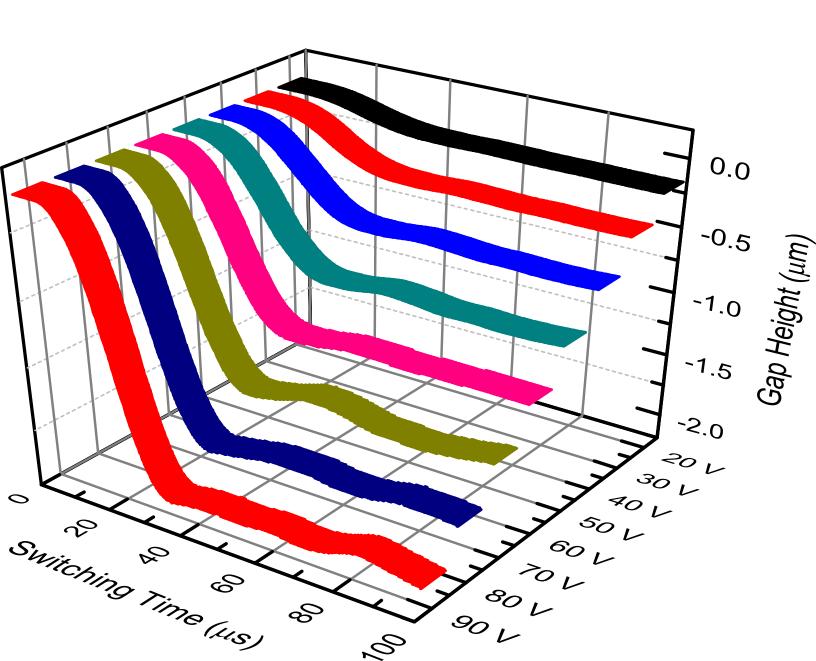

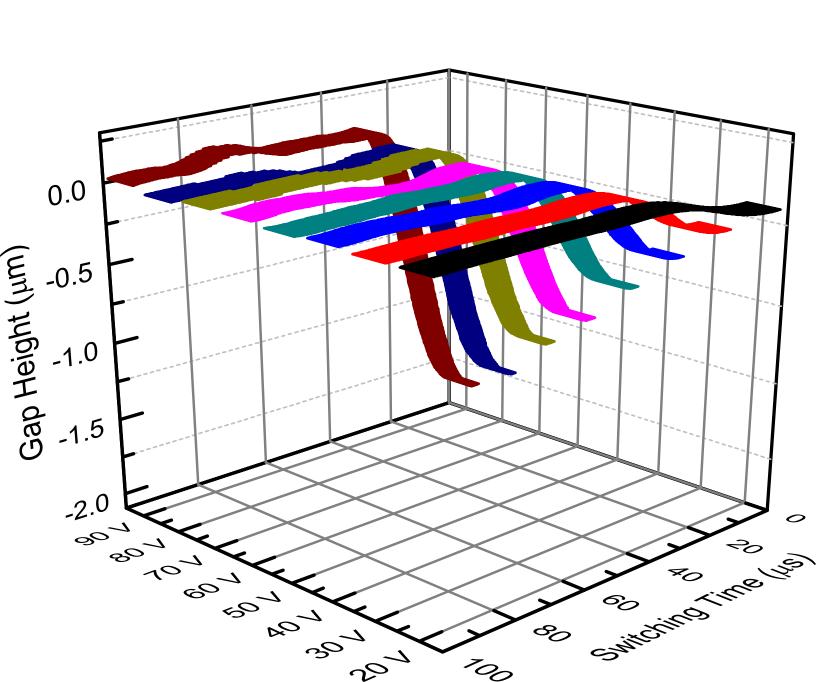

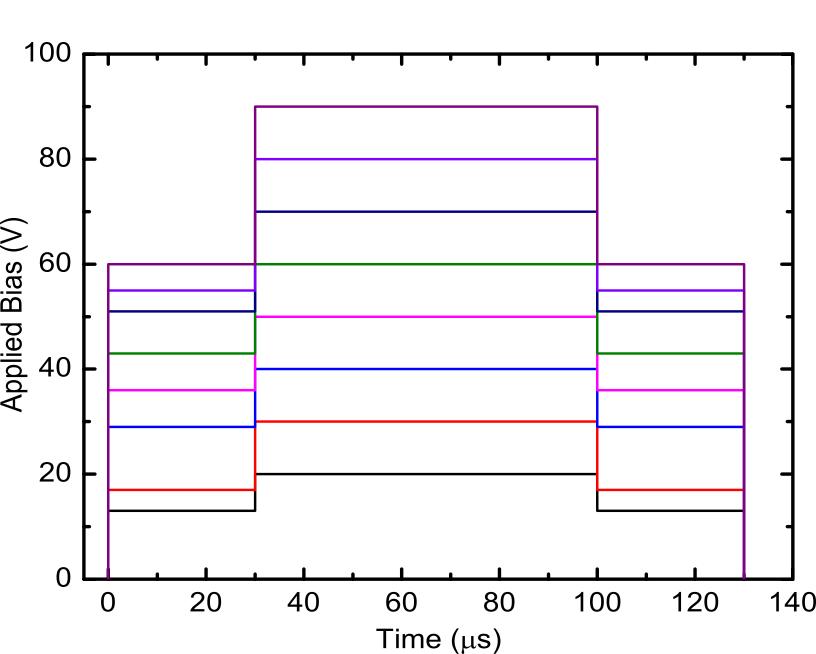

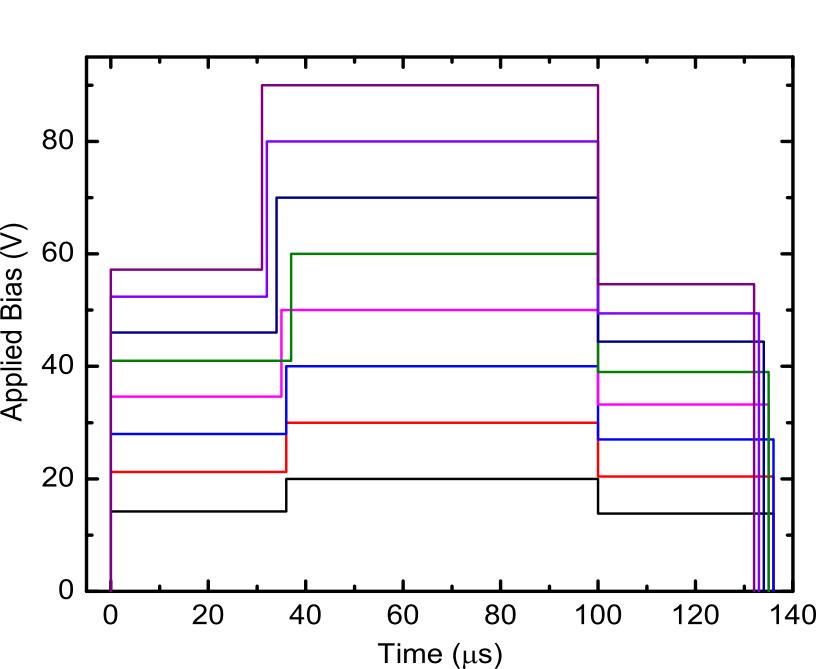

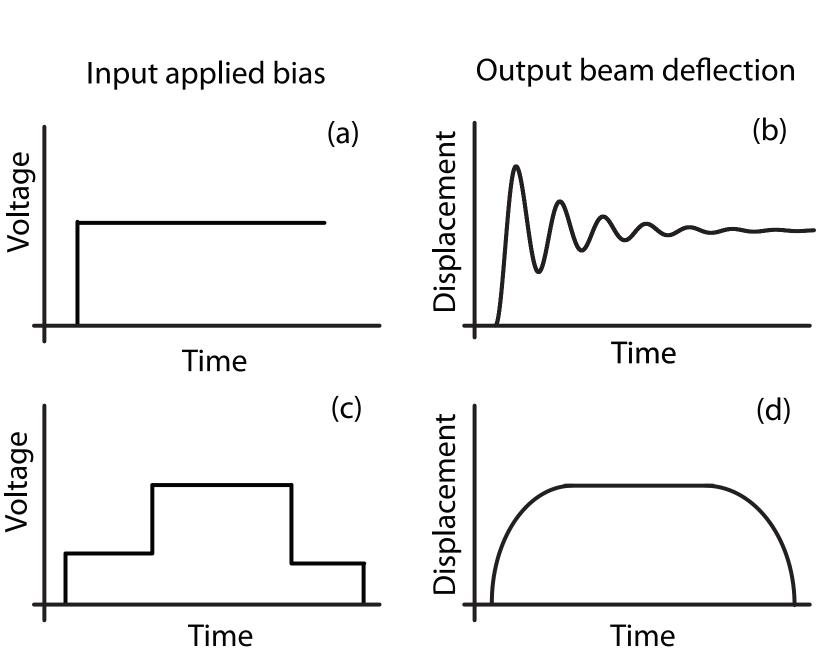

Chemical	Company	Catalogue number
Buffered oxide etchant	Mallinckrodt Baker	1178
Acetone	Mallinckrodt Baker	5356
Isopropyl alcohol	Honeywell	BDH-140
Hexamethyldisilizane	Mallinckrodt Baker	5797
Microposit SC 1827 Positive Photoresist	Shipley Europe Ltd	44090
Microposit MF-26A developer	Shipley Europe Ltd	31200
Tetramethylammonium hydroxide	Sigma-Aldrich	334901
Hydrofluroic acid	Sciencelab.com	SLH2227
Sulfuric acid	Sciencelab.com	SLS2539
Hydrogen peroxide	Sciencelab.com	SLH1552
Transene Sulfite Gold TSG-250	Transense	110-TSG-250
Baker PRS-3000 Positive Resist Stripper	Mallinckrodt Baker	6403
Gold etchant type TFA	Transense	060-0015000

Comments (optional)

Silicon dioxide etch, Ti etch wafer clean wafer clean adhesion promoter Pattern, electroplating Develop SC 1827 Bulk Si etch Silicon dioxide etch wafer clean Wafer clean Au electroplating solution Photoresist stripper Au etch

Equipment	model number
Mask aligner	Karl Suss MJB-3
Sputter coater	Perkin Elmer 2400 Sputterer
Thermal oxidation furnace	Pryogenic Oxidation Furnace
Reactive Ion Etch	Plasmatech RIE
Xenon difluoride dry etcher	Xactix Xenon Difluoride Etcher
Surface profilometer	Alpha-Step IQ
Probe ring	Signatone
DC manipulators	Signatone S-900 Series Micropositioner
Laser doppler vibrometer	Polytec OFV-551/MSA-500 Micro System Analyzer
digital function generator	Agilent E4408B Function Generator
high voltage linear amplifier	Single channel high voltage linear amplifier A400
digital oscilloscope	Agilent DS05034A Digital Oscilloscope

Comment

Pattern photoresist
Deposit metal
Grow silicon dioxide
Plasma ash
Selective dry isotropic silicon etch
Step height measurement
Holds DC probe manipulators
Applies potential difference to device
Switching time measurement
Creates the DC-dynamic waveform
Facilitates high voltage

Verify the dynamic waveform parameters



Title of Article:

in scherely univerdamped pringing field electrostatic MEMS actuators

ARTICLE AND VIDEO LICENSE AGREEMENT

Author(s):	Joshua Small, Adam Fruenting, Anuray Garg, Xiaoguang Liu, and Dintrios Peroulis
Item 1 (check o	Item 1 (check one box): The Author elects to have the Materials be made available (as described at
http://w	http://www.jove.com/publish) via: X Standard Access Open Access
Item 2 (check one box):	ne box):
X The /	The Author is NOT a United States government employee.
The course of	The Author is a United States government employee and the Materials were prepared in the course of his or her duties as a United States government employee.
The	The Author is a United States government employee but the Materials were NOT prepared in the
course o	course of his or her duties as a United States government employee.

ARTICLE AND VIDEO LICENSE AGREEMENT

Agreement, the following terms shall have the following meanings: "Agreement" means this Article and Video License by the Author, alone or in conjunction with any other parties, or by JoVE or its affiliates or agents, individually or in collaboration with the Author or any other parties, means MyJove Corporation, a Massachusetts corporation and the publisher of *The Journal of Visualized Experiments* employed at the time of the creation of the Materials; "JoVE" or adapted; "Institution" means the institution, listed on the Agreement, the terms and conditions of which can be found independent works in themselves, are assembled into a collective whole; "CRC License" means the Creative Commons such as a periodical issue, anthology or encyclopedia, in which signatory to this Agreement; "Collective Work" means a work, contained therein; "Author" such as texts, figures, tables, artwork, abstracts, or summaries page of this Agreement, including any associated materials Agreement; "Article" means the article specified on the last means the Author and JoVE; "Video" means any video(s) made last page of this Agreement, by which the other form in which the Materials may be recast, transformed, recording, art reproduction, abridgment, condensation, or any dramatization, fictionalization, motion picture version, sound existing works, such as a translation, musical arrangement, upon the Materials or upon the Materials and other prend/3.0/legalcode; "Derivative Work" means a work based Attribution-Non number of other contributions, constituting separate and the Materials in their entirety in unmodified form, along with a Author may or may not appear. "Materials" means the Article and / or the Video; "Parties" incorporating all or any portion of the Article, and in which the Defined Terms. As used in this Article and Video License the following terms shall have the following http://creativecommons.org/licenses/by-nc-Commercial-No means the author who is Derivs 3.0 Author was Unported

- 2. <u>Background</u>. The Author, who is the author of the Article, in order to ensure the dissemination and protection of the Article, desires to have the JoVE publish the Article and create and transmit videos based on the Article. In furtherance of such goals, the Parties desire to memorialize in this Agreement the respective rights of each Party in and to the Article and the Video.
- subject to Sections 4 and 7 below, the exclusive, royalty-free, perpetual (for the full term of copyright in the Article, to publish the Article, the Author hereby grants to JoVE 3. Grant of Rights in Article. In consideration of JoVE agreeing set forth in, the CRC License. as provided in, but subject to all limitations and requirements whether now known or hereafter devised, and include the (c) to license others to do any or all of the above. summaries, extracts, Derivative Works or Collective Works and forth in or any portion of the Article and exercise all of the rights set without limitation, the Video) or Collective Works based on all extracts of the Article or other Derivative Works (including Article into other languages, create adaptations, summaries or electronic form) throughout the world, (b) to translate the developed (including without limitation in print, digital and formats and media whether now known or reproduce, distribute, display and store the Article in all forms, including any extensions thereto) license (a) to publish, Author hereby grant to the public all such rights in the Article Access" box has been checked in Item 1 above, JoVE and the to exercise the rights in other media and formats. If the "Open right to make such modifications as are technically necessary foregoing rights may be (a) above in such translations, exercised in all media and formats, adaptations, hereafter
- 4. Retention of Rights in Article. Notwithstanding the exclusive license granted to JoVE in Section 3 above, the

 \vdash



ARTICLE AND VIDEO LICENSE AGREEMENT

Author shall, with respect to the Article, retain the non-exclusive right to use all or part of the Article for the non-commercial purpose of giving lectures, presentations or teaching classes, and to post a copy of the Article on the Institution's website or the Author's personal website, in each case provided that a link to the Article on the JoVE website is provided and notice of JoVE's copyright in the Article is included. All non-copyright intellectual property rights in and to the Article, such as patent rights, shall remain with the Author.

- all such rights and transfers all such rights to JoVE of any nature in or to the Video, the Author hereby disclaims deemed, now or at any time in the future, to have any rights to the Video. any nature, including, without limitation, all copyrights, in and JoVE is and shall be the sole and exclusive owner of all rights of acknowledges and agrees that, Subject to Section 7 below, otherwise assist consideration of JoVE 1 above or if no box has been checked in Item 1 above. applies if the "Standard Access" box has been checked in Item Grant of Rights in Video - Standard Access. This Section 5 To the extent that, by law, with the Video, agreeing to produce, the Author the Author is display hereby
- of the rights set forth in (a) above in such translations, extracts of the Video or other Derivative Works or Collective electronic form) throughout the world, (b) to translate the developed (including without limitation in print, digital and display or otherwise assist with the Video, the Author hereby Item 1 above. In consideration of JoVE agreeing to produce, 6. Grant of Rights in Video - Open Access. applies only if the "Open Access" box has t requirements set forth in, the CRC License. Video as provided in, but subject to all limitations and the Author hereby grant to the public all such rights in the For any Video to which this Section 6 is applicable, JoVE and include the right to make such modifications as are technically and formats, whether now known or hereafter devised, and the above. The foregoing rights may be exercised in all media Collective Works and (c) to license others to do any or all of Works based on all or any portion of the Video and exercise all Video into other languages, create adaptations, summaries or formats and media whether now known or reproduce, distribute, display and store the Video in all forms, Article, including any extensions thereto) license (a) to publish, royalty-free, perpetual (for the full term of copyright in the necessary to exercise the rights in other media and formats. to JoVE, subject to Section 7 below, the exclusive, summaries, extracts, Derivative Works box has been checked in This Section hereafter
- 7. Government Employees. If the Author is a United States government employee and the Article was prepared in the course of his or her duties as a United States government employee, as indicated in **Item 2** above, and any of the licenses or grants granted by the Author hereunder exceed the scope of the 17 U.S.C. 403, then the rights granted hereunder shall be limited to the maximum rights permitted under such statute. In such case, all provisions contained herein that are not in conflict with such statute shall remain in full force and effect, and all provisions contained herein that do so conflict

shall be deemed to be amended so as to provide to JoVE the maximum rights permissible within such statute.

- 8. <u>Likeness, Privacy, Personality</u>. The Author hereby grants JoVE the right to use the Author's name, voice, likeness, picture, photograph, image, biography and performance in any way, commercial or otherwise, in connection with the Materials and the sale, promotion and distribution thereof. The Author hereby waives any and all rights he or she may have, relating to his or her appearance in the Video or otherwise relating to the Materials, under all applicable privacy, likeness, personality or similar laws.
- regulations, including, without limitation all institutional, laboratory, hospital, ethical, human and animal treatment, and/or misappropriate the patent, trademark, intellectual portion of the Materials does not and will not violate, infringe performance or display, and/or modification of all or any the Author represents and warrants that the Author has been authorized by each of the other such authors to execute this any such author has not entered into a separate Article and than one author is listed at the top of this Agreement and if this Agreement are the only authors of the Materials. If more represents and warrants that the author(s) listed at the top of or otherwise transferred to any other party. such authors collectively) and has not been assigned, licensed, one author is listed at the beginning of this Agreement, by the copyright interest is owned by the Author (or, if more than that the Article is original, that it has not been published, that privacy, and all other rules, regulations, laws, procedures or represents and warrants that it has and will continue to property or other rights of any third party. been a party hereto as an Author. The Author warrants that respect to the terms of this Agreement as if each of them had Agreement on his or her behalf and to bind him or her with Video License Agreement with JoVE relating to the Materials, the Author's relevant institutional review board. involving human and animal subjects has been approved by guidelines, applicable to the Materials, and that all research Author Warranties. The Author represents and warrants with reproduction, all government, distribution, institutional public The Author Q and other The Author private
- executed Article and Video License Agreements from each the Article until such time as it has received complete, in its sole discretion, elect not take any action with respect to author is listed at the beginning of this Agreement, regulations of the Author's institution. independent contractors is in accordance with the relevant JoVE in producing the Video in the Author's facility, the Author method of making and publishing the Materials, including actually published or not. JoVE has sole discretion as to the Author's institution as necessary to make the Video, whether full, unfettered access to the facilities of the Author or of the employees, agents and independent contractors shall have or decline any work submitted to JoVE. discretion and without giving any reason therefore, such author. JoVE reserves the right, in its absolute and sole shall ensure that the presence of JoVE employees, agents or JoVE Discretion. If the Author requests the assistance of If more than one JoVE JoVE may, to accept



ARTICLE AND VIDEO LICENSE AGREEMENT

without limitation, to all decisions regarding editing, lighting, filming, timing of publication, if any, length, quality, content

of the Author and shall be undertaken at the Author's of work to JoVE, making of videos by JoVE, or publication in other losses or damages related in any way to the submission regulations, laws, procedures or guidelines, human and animal treatment, privacy or injury, violations of institutional, laboratory, hospital, ethical, research, equipment, experiments, property damage, personal Author's institution's facilities, fraud, libel, defamation, of intellectual property rights, damage to the Author's or the contained herein or from allegations or instances of violation breach by the Author of any representation or and expenses, including attorney's fees, resulting from the hold harmless JoVE from and against any and all claims, costs, contained herein. The Author further agrees to indemnify and out of any breach of any warranty or other representations claims, costs, and expenses, including attorney's fees, arising and/or its successors and assigns from and against any and all JoVE's attorney's fees and costs related to said losses decontamination procedures shall be solely the responsibility independent contractors. due to the making of a video by JoVE its employees, agents or lack of sterilization, lack of cleanliness or by contamination for, and shall hold JoVE harmless from, damages caused by *JoVE* or elsewhere by JoVE. The Author shall be responsible All indemnifications provided herein shall include The Author agrees to indemnify JoVE All sterilization, cleanliness liabilities and other warranty rules, 9

> independent contractors. with, acts or omissions of JoVE, its employees, agents or include such losses or damages incurred by, or in connection damages. Such indemnification and holding harmless shall

- publication of the Materials will be suspended until payment is not received by the completion of filming, production and cover pre-production expenses incurred by JoVE. If payment is final peer review approval will result in a US\$1,200 fee to Withdrawal by the Author of any submitted Materials after Materials not be published due to an editorial or production Materials. Payment is due in 21 days of invoice. Should the must receive payment before production and publication the these funds will be returned to the Author. To cover the cost incurred for publication, JoVE
- transmission shall be deemed to have the same legal effect as delivered by facsimile, e-mail or other means of electronic and the same agreement. original, executed in counterparts, each of which shall be deemed an Commonwealth of Massachusetts without giving effect to any conflict of law provision thereunder. This Agreement may be governed and construed JoVE's successors and assignees. assigned by JoVE and shall inure to the benefits of any delivery of an original signed copy of this Agreement. Transfer, Governing Law. but all of which together shall be deemed to me one A signed copy of this Agreement φ the internal laws of This Agreement shall be This Agreement may be to the benefits of any of the

A signed copy of this document must be sent with all new submissions. Only one Agreement required per submission.

AUTHOR:		
Name:	Joshua Small	
Department:	Electrical and Computer Engineering	
Institution:	University of Colifornia Davis	
Article Title:	Real-time DC-dynamic binsing method for switching time improvement in severely underdamped frincing - field electrostatic MEMS actuators	sewerely
Signature:	All rights reserved 1-30% Date: Mary 30, 2013	33
Signature:		

Please submit a signed and dated copy of this license by one of the following three methods:

- Upload a scanned copy as a PDF to the JoVE submission site upon manuscript submission (preferred);
- Fax the document to +1.866.381.2236; or
- Mail the document to JoVE / Attn: JoVE Editorial / 17 Sellers St / Cambridge, MA 02139

For questions, please email editorial@jove.com or call +1.617.945.9051

MS # (internal use)	
·:	-
	1
	- 12
	1
-	
	-
	- 1
- 10	

ω

Editorial comments:

* There are a few sections of your manuscript that show significant overlap with your previously published work. These sections include those indicated by the red font in the attached manuscript. Please re-write that text to avoid plagiarism (including self-plagiarism). We understand that there may be a limited number of ways to describe a complex technique such as yours, but you must use original language throughout the manuscript.

These sections have been re-written with original language and are highlighted in the revision.

* Protocol text:

1) Please make sure every step is in the imperative tense as if you are telling someone how to do the technique (i.e. "Do this", "Measure that" etc.)

Every step in the protocol has been changed to the imperative tense. The changes are highlighted in the revision.

2) If you are re-using figures from a previous publication, you must obtain explicit permission to re-use the figure from the previous publisher (this can be in the form of a letter from an editor or a link to the editorial policies that allows you to re-publish the figure) and you must cite the figure appropriately in the figure legend, i.e. "This figure has been modified from [citation]."

There was a misunderstanding in reading the contract with the previous publisher. It states that the figures can be reused, but only for personal publications and personal websites where a third party is not involved. Therefore, all new figures were created with a different format, organization, sequence, and style of presentation.

3) Please provide more information/descriptions for the highlighted steps. For example, could you describe in detail what is meant by "prepare" in steps 2.1 and 2.2.

The steps in the X.X format are the headers for the steps in the X.X.X. format. In other words, the X.X.X steps is the detailed description of the X.X header. The protocol was reorganized to make this point a clearer. Words like "prepare" are replaced with sufficiently descriptive text. These changes are highlighted in the revision.

Supplemental File (as requested by JoVE) Previous paper Click here to download Supplemental File (as requested by JoVE): joshua_JMM_paper.pdf

List of Changes Click here to download Supplemental File (as requested by JoVE): list_of_changes.docx

Supplemental File (as requested by JoVE)
Click here to download Supplemental File (as requested by JoVE): 51251_R2_marked_comments.docx