

Journal of Visualized Experiments

Multi-material ceramic-based components - Additive Manufacturing of black-and-white zirconia components by Thermoplastic 3D-Printing (T3DP) --Manuscript Draft--

Article Type:	Invited Methods Article - JoVE Produced Video
Manuscript Number:	JoVE57538R2
Full Title:	Multi-material ceramic-based components - Additive Manufacturing of black-and-white zirconia components by Thermoplastic 3D-Printing (T3DP)
Keywords:	Additive Manufacturing; Ceramics; multi-material; multi-color; zirconia; Thermoplastic 3D-Printing (T3DP); Functionally Graded Materials (FGM)
Corresponding Author:	Uwe Scheithauer Fraunhofer-Institut für Keramische Technologien und Systeme Dresden, Saxony GERMANY
Corresponding Author's Institution:	Fraunhofer-Institut für Keramische Technologien und Systeme
Corresponding Author E-Mail:	Uwe.Scheithauer@ikts.fraunhofer.de
First Author:	Uwe Scheithauer
Other Authors:	Steven Weingarten Robert Johnne Johannes Abel Eric Schwarzer Tassilo Moritz Alexander Michaelis
Author Comments:	Dear Ladies and Gentlemen, please change the corresponding author to Mr. Steven Weingarten - I am the first co-author. Thank you very much! Kind regards, Uwe Scheithauer
Additional Information:	
Question	Response
If this article needs to be "in-press" by a certain date, please indicate the date below and explain in your cover letter.	

cover letter

Multi-color ceramic-based 4D components – Additive Manufacturing of black-and-white zirconia components by Thermoplastic 3D-Printing (T3DP)

- A rationale on why this work should be published in JoVE's unique multimedia format

AM technologies allow the realization of complex structures which could not be manufactured before. The combination of this technologies with the benefits of Multi-Material-components opens the door to various applications in nearly all field of life, environment and technology.

To illustrate the principles and the benefits of the T3DP-technology to all people the multimedia format of JoVE is just perfect. The reader will see all necessary manufacturing steps and will understand the whole technology within minutes.

- All author contributions
 - Steven Weingarten (steven.weingarten@ikts.fraunhofer.de)
Mr. Weingarten chose this topic as topic for his diploma thesis. He planned and performed nearly all tests and discussed the results.
 - Uwe Scheithauer (uwe.scheithauer@ikts.fraunhofer.de)
Mr. Scheithauer was one of the supervisors of the diploma thesis of Mr. Weingarten, conceived the topic and organized the development of the T3DP-device and designed some of the test components.
 - Robert Johné (robert.johne@fraunhofer.sg)
Mr. Johné is an expert for the parameter screening to identify the right dispensing parameters for T3DP. He supported the work of Mr. Weingarten in this topic.
 - Johannes Abel (johannes.abel@ikts.fraunhofer.de)
Mr. Abel is an expert for thermoplastic-based ceramic suspensions and supported Mr. Weingarten during the suspension development.
 - Eric Schwarzer (eric.schwarzer@ikts.fraunhofer.de)
Mr. Schwarzer is an expert for rheological measurement and did all rheological measurements for this work.
 - Tassilo Moritz (tassilo.moritz@ikts.fraunhofer.de)
Dr. Moritz was one of the supervisors of the diploma thesis of Mr. Weingarten and project leader of the CerAMfacturing-project.
 - Alexander Michaelis (alexander.michaelis@ikts.fraunhofer.de)
Prof. Michaelis was the university supervisors of the diploma thesis of Mr. Weingarten and discussed all results with Mr. Weingarten.

- The names of any JoVE editors who have assisted you in the submission process

Jialan Zhang jialan.zhang@jove.com

- A list of 6 peer reviewers' names with their institutional affiliation and email address.

- Jens Günster, Prof. Bundesanstalt für Materialforschung und –prüfung, Jens.Guenster@bam.de
- Prof. Nahum Travitzky, Friedrich-Alexander-Universität Erlangen-Nürnberg, nahum.travitzky@fau.de
- Dr. Johannes Homa, Lithoz, jhoma@lithoz.com
- Dr. Martin Schwentenwein, Lithoz, mschwentenwein@lithoz.com
- Christos G. Aneziris, IKGB der TU BA Freiberg, aneziris@ikgb.tu-freiberg.de
- Aldo Boccaccini, Friedrich-Alexander-Universität Erlangen-Nürnberg, aldo.boccaccini@fau.de

Up to three opposed reviewers may also be suggested.

- Dr. Wolfgang Kollenberg, WZR ceramic solutions, w.kollenberg@wzr.cc

TITLE:

Multi-material Ceramic-Based Components – Additive Manufacturing of black-and-white Zirconia Components by Thermoplastic 3D-Printing

AUTHORS & AFFILIATIONS:

Steven Weingarten¹, Uwe Scheithauer¹, Robert John², Johannes Abel¹, Eric Schwarzer¹, Tassilo Moritz¹, Alexander Michaelis¹

¹Fraunhofer Institute for Ceramic Technologies and Systems IKTS, Dresden, Germany

²Fraunhofer Singapore, Singapore

E-MAIL ADDRESSES:

Steven Weingarten (steven.weingarten@ikts.fraunhofer.de)

Uwe Scheithauer (uwe.scheithauer@ikts.fraunhofer.de)

Robert John (robert.johne@fraunhofer.sg)

Johannes Abel (johannes.abel@ikts.fraunhofer.de)

Eric Schwarzer (eric.schwarzer@ikts.fraunhofer.de)

Tassilo Moritz (tassilo.moritz@ikts.fraunhofer.de)

Alexander Michaelis (alexander.michaelis@ikts.fraunhofer.de)

CORRESPONDING AUTHOR:

Steven Weingarten (steven.weingarten@ikts.fraunhofer.de)

KEYWORDS:

Additive Manufacturing, ceramics, multi-material, multi-color, zirconia, Thermoplastic 3D-Printing (T3DP), Functionally Graded Materials (FGM)

SHORT ABSTRACT:

Here we describe a protocol for additively manufacturing black-and-white zirconia components by Thermoplastic 3D-Printing (T3DP) and co-sintering defect-free.

LONG ABSTRACT:

To combine the benefits of Additive Manufacturing (AM) with the benefits of Functionally Graded Materials (FGM) to ceramic-based 4D components (three dimensions for the geometry and one degree of freedom concerning the material properties at each position) the Thermoplastic 3D-Printing (T3DP) was developed. It is a direct AM technology which allows the AM of multi-material components. To demonstrate the advantages of this technology black-and-white zirconia components were additively manufactured and co-sintered defect-free.

Two different pairs of black and white zirconia powders were used to prepare different thermoplastic suspensions. Appropriate dispensing parameters were investigated to manufacture single-material test components and adjusted for the additive manufacturing of multi-color zirconia components.

INTRODUCTION:

Functionally Graded Materials (FGM) are materials with a variety of properties concerning transitions in the microstructure or in the material¹. These transitions can be discrete or continuous. Different kinds of FGM are known, such as components with material gradients, graded porosity as well as multi-colored components.

FGM-components can be manufactured by single conventional shaping technologies²⁻⁷ or by a combination of these technologies, for example, by in-mold labeling as a combination of tape casting and injection molding^{8,9}.

Additive manufacturing (AM) allows for the production of components with a so far unprecedented freedom of design. This is considered the state of the art shaping technology for polymers and metals. First commercial processes for processing of the ceramics are available¹⁰, and nearly all known AM technologies are used for AM of ceramics in laboratories all over the world¹¹⁻¹³.

To combine the benefits of AM with the benefits of FGM to ceramic-based 4D components (three dimensions for the geometry and one degree of freedom concerning the material properties at each position) the Thermoplastic 3D-Printing (T3DP) has been developed at Fraunhofer IKTS in Dresden, Germany, as a direct AM technology. This allows the AM of multi-material components¹⁴⁻¹⁷. T3DP is based on the selective deposition of single droplets of particle filled thermoplastic suspensions. By utilizing multiple dosing systems, different thermoplastic suspensions can be deposited beside each other layer by layer to produce bulk material as well as property gradients within the additively manufactured green components¹⁸. Unlike indirect AM processes, in which previously deposited materials solidify selectively over the entire layer, the T3DP process does not require the additional effort of removing any non-solidified material prior to the deposition of the next material, making it more suitable for the AM of multi-material components.

Although utilizing the T3DP process allows the AM of FGM and the realization of ceramic-based components with unprecedented properties, there are challenges to overcome the necessary thermal treatment after the AM process, in order to obtain a multi-material composite. In particular, the paired powders in the composite material need to be successfully co-sintered, for which the sintering of the components has to be performed at the same temperature and atmosphere. Therefore, it is a prerequisite for all materials to have a comparable sintering temperature and behavior (starting temperature of sintering, shrinkage behavior). In order to avoid critical mechanical stress during cooling, the coefficient of thermal expansion of all materials has to be approximately equal¹¹.

The combination of materials with different properties in one component opens the door to components with unprecedented properties for manifold applications. *E.g.* stainless steel-zirconia composites can be used as cutting tools, wear resistant components, energy, and fuel cell components or as bipolar surgical tools¹⁹⁻²⁴. Such components could be realized by T3DP¹⁴⁻¹⁷, too, after the adjustment of the sintering behavior by a special milling process¹⁶.

Ceramic-based FGM with a graded porosity like dense and porous zirconia combine very good mechanical properties in the dense areas with a high active surface of the porous areas. Such like components can be additively manufactured by T3DP¹⁸.

In this paper, we investigate the AM of zirconia components with two different colors in one component by T3DP. We chose white and black zirconia because this combination in one ceramic component is interesting for jewelry applications. The demand for individualized luxury goods is very high and still growing. Technologies which allow the AM of ceramic-based multi-material components with a high resolution and very good surface properties will allow satisfying this demand. Ceramics like zirconia are used for example to produce watch components like watch cases and bezels or for rings because of the special haptics, glance, hardness and lower weight compared to metals.

PROTOCOL:

1. Thermoplastic Suspension for T3DP

1.1. Selection of powders

1.1.1. For the preparation of the thermoplastic suspensions use black zirconia powders *zirconia black – 1* and *zirconia black – 2*.

1.1.2. For the preparation of the white thermoplastic suspensions use *zirconia white - 1* and *zirconia white - 2*.

Note: The manufacturer of *zirconia black - 2* uses pigments (4.2 wt.-%) for the coloring of the zirconia and also states that both powders have the same sintering behavior. Additionally, the high percentage of alumina (20.43 wt.-%) contributes to the white color of *zirconia white - 2*. The powders *zirconia black - 1* and *zirconia white - 1* have a different composition and thus require a different sintering temperature for complete densification. In contrast to *zirconia white – 1*, *zirconia black - 1* consists at most 5% wt pigments. The recommended sintering temperatures are 1,400 °C for *zirconia black - 1* and 1,350 °C for *zirconia white - 1*.

1.2. Characterize the powders with respect to shape, surface area and particle size distribution.

Note: Electron scanning microscopy images have been used to characterize the shape of the particles. The particle size distribution of the utilized powders was measured by a laser diffraction method (*laser diffractometer*). The measurements for the specific surface properties of the used powders have been provided by the manufacturer.

1.3. For the preparation of the different zirconia suspensions, melt a mixture of paraffin and beeswax at a temperature of 100 °C in a heatable *dissolver* and homogenize the polymer mixture.

133 1.3.1. Then add the powder in several steps to reach a powder content of 40% vol.

134
135 1.3.2. Homogenize the powder-polymer-mixture by stirring for 2 h at 100 °C. Ensure that all
136 suspensions have the same powder content (40% vol.).

137 138 1.4 Characterization of suspensions

139
140 1.4.1. Characterize the rheological behavior of the molten suspension using a *rheometer* for shear
141 rates in a range between 0-5000/s for different temperatures in a range between 85 °C and
142 110 °C.

143
144 **Note:** In this experiment, a *rheometer* was used which was adjustable between -25 °C to 200 °C
145 with a plate/plate measuring system (25 mm diameter). The torque was measured, and the
146 dynamic viscosity was calculated.

147
148 1.4.2. Plot the dynamic viscosity as the function of the shear rate and make sure that the dynamic
149 viscosity is below 100 Pa·s for a shear rate of 10/s, below 20 Pa·s for a shear rate of 100/s and
150 below 1 Pa·s for a shear rate of 5,000/s or increase the temperature within the permissible range.

151
152 1.4.3. Change the suspension composition by adding polymer mixture if the dynamic viscosity is
153 too high even for a temperature of 110 °C.

154 155 2. Manufacturing of Single and Multi-Material Components by T3DP

156 157 2.1. Used device

158
159 **Note:** **Figure 1** shows a CAD-drawing of the used *T3DP-device* with one *profile scanner* and three
160 different *micro dispensing systems*, which can work simultaneously or alternately. Use two of
161 them to produce black-and-white components.

162
163 2.1.1. Set the deposition of the droplets to a frequency up to 100/s and the axes to move with a
164 maximum velocity of 20 mm/s.

165 166 2.2. Investigation of deposition parameters

167
168 **Note:** Investigate the influence of deposition parameters (working velocities of the micro
169 dispensing system; temperatures of suspension reservoir and nozzle; velocity of the axis) on the
170 properties of the resulting droplets (shape; volume; homogeneity) or droplet chains (shape;
171 volume; homogeneity).

172
173 2.2.1. Vary the deposition parameters and deposit single droplets as well as droplet chains by
174 using different frequencies and axes velocities for deposition.

175
176 **Note:** The influence of the dispenser parameters on the properties of the materials has been

discussed before²⁵. Parameter value boundaries have only been determined empirically.

2.2.2. Make sure that the variance in droplet chain height and width should not exceed 3 %. Vary the parameters pulse width, droplet fusion factor (DFF) and extrusion width (slicing parameter) to compensate diameter differences up to 100 microns and height differences up to 50 microns.

Note: It is not necessary and probably not possible to realize perfectly shaped hemispheres as single droplets, but you have to make sure that the homogeneity of the droplet formation is very high to guarantee a homogeneous building of the components.

2.2.3. Repeat this step with different initial parameters to find a parameter set which provides the most homogenous droplet shape with respect to droplet diameter, width, and height.

2.3 Manufacturing of single-material test components

2.3.1. Use a generated 3D model of the desired part and save the file as STL or AMF file format.

2.3.2. Use a slicing program (e.g. *Slicer 1* or *Slicer 2*) to generate the corresponding G-code. Set the properties for the droplet shape acquired in step 2.2.

2.3.3. Upload the G-code and fill the process parameters to the T3DP-device. Set the T3DP-device for the parameters obtained in step 2.2 that did correspond to the droplet shape provided to the slicer. Start the device software to start the building job.

Note: It is beneficial to manufacture certain test samples before building the desired part or using new suspensions.

2.4. T3DP of multi-material components

2.4.1. For each material involved execute step 2.2.

2.4.2. Select dispensing parameters for both materials which have approximately the same droplet characteristics.

2.4.3. Adjust the layer heights by changing the distance between the single droplets and the resulting overlap to avoid differences in heights for the different materials, which can result in large defects and faulty components.

Note: By reducing the distance between two droplets and the associated greater overlap, the width and height of the droplet chain increases due to the nearly constant volume of the single droplets. It can be observed that the droplet chain width increases faster than the droplet chain height.

2.4.4. Use a generated 3D model of the desired part and save the file as AMF files. If supported by the slicer multiple component areas can also be saved in STL file format.

2.4.5. In order to print multi-material components, assign corresponding component areas to the associated material in the slicing software by allocating a corresponding *micro dispensing system* for each material.

2.4.6. Generate the G-codes for each material by using the slicer software.

2.4.7. Upload the G-code and fill the process parameters to the T3DP-device. Set the T3DP-device for the parameters obtained in step 2.2 that did correspond to the droplet shape provided to the slicer. Start the device software to start the building job.

3. Co-Debinding and Co-Sintering of Single- and Multi-Material Components

3.1. Debind the green samples in the following separate steps.

3.1.1. First, put the samples in a loose bulk of coarse-grained alumina powder (powder bed) to structurally support the samples as well as to ensure a homogeneous temperature distribution and to promote the removal of the binder materials by capillary forces.

3.1.2. Perform a debinding with a very low heating rate in a furnace (*debinding furnace*) under air-atmosphere up to 270 °C. Set the heating rate to 4 K/h to ensure a defect-free debinding.

3.2 After this first debinding step carefully remove the bedding powder for example with a fine brush. Place the samples on alumina kiln furniture.

3.3. Apply a second debinding step under air-atmosphere up to 900 °C (12 K/h) in the same furnace.

Note: All remaining organic binder materials were thermally removed, while within in the same step a pre-sintering of the zirconia particles was initiated to enable the subsequent transfer of the samples to a sintering kiln.

3.4. Finally, sinter the samples under air-atmosphere at 1,350 °C (180 K/h) for 2 h in a suitable furnace (*sintering furnace*). Characterize the shrinkage of the components by length measurement in three dimensions and make sure that it is about 20% for each direction.

4. Characterization of Single- and Multi-Material Components

4.1. Cut the samples properly and polish the surface using ceramographic methods.

4.2. Apply investigations on the microstructure by using Field Emission Scanning Electron Microscope (FESEM).

4.3. Visually inspect the porosity of the two phases and at the boundary interface of the used materials. To obtain a more detailed result perform an interface analysis, e.g. by FESEM and subsequent picture analysis to investigate the porosity within the sintered microstructure.

Note: The targeted porosity is below 1%. If the porosity is too high, vary the deposition parameter rising (2.2) and/or the regime of the thermal treatment (3).

REPRESENTATIVE RESULTS:

For the production of measured components, only powders of the same manufacturer have been combined for each multi-material component. Experiments with powders of different manufacturers in one component are still ongoing. For this purpose, the different shrink rates have to be considered.

The measurement result of the average particle diameter (d_{50}) of the *zirconia white - 1* after dispersion was $0.37\text{ }\mu\text{m}$. The manufacturer states an actual particle size of $0.04\text{ }\mu\text{m}$ (one order of magnitude less). The average particle size (d_{50}) of the *zirconia black - 1* is $0.5\text{ }\mu\text{m}$. **Figure 2 (A)** shows the FESEM analysis of the *zirconia white - 1* and **Figure 2 (B)** a FESEM-image of the surface of a granulate in detail. **Figure 2 (C)** and **Figure 2 (D)** show the same for *zirconia black - 1*. Both untreated powders consist of big spherical granules (diameter up to $100\text{ }\mu\text{m}$) which is typical for dry pressing raw materials. The FESEM-images of the granulate surfaces show the primary particles of the *zirconia white - 1* (**Figure 2 (B)**) and *zirconia black - 1* (**Figure 2 (D)**) with an actual particle size of almost $0.04\text{ }\mu\text{m}$.

The **Figures 2 (E) – 2 (H)** show the FESEM-images of the *zirconia white – 2* and *zirconia black - 2*. The measured average particle sizes (d_{50}) of the zirconia powders *zirconia white – 2* and *zirconia black – 2* are $0.27\text{ }\mu\text{m}$ and $0.25\text{ }\mu\text{m}$, respectively, wherein the particles are present as spherical granules with diameters up to $100\text{ }\mu\text{m}$ (**Figure 2 (E)** and **Figure 2 (G)**). The size of the white powders primary particles is below $0.1\text{ }\mu\text{m}$ (**Figure 2 (F)**). The black powders primary particles are up to $0.5\text{ }\mu\text{m}$ in diameter (**Figure 2 (H)**).

Figure 3 (A) shows the dynamic viscosity of the suspensions based on *zirconia white – 1* and *zirconia black - 1* as a function of the shear rate and in dependence of the temperature ($85\text{ }^{\circ}\text{C}$ and $100\text{ }^{\circ}\text{C}$). Both suspensions show a shear thinning behavior regardless of the temperature.

Table 1 summarizes the measured viscosities of the suspensions at different shear rates and for different temperatures.

Figure 3 (B) shows the rheological behavior of the suspensions based on *zirconia white – 2* and *zirconia black - 2* ($85\text{ }^{\circ}\text{C}$ and $100\text{ }^{\circ}\text{C}$). All graphs show a shear thinning behavior. **Table 2** summarizes the measured viscosities of the suspensions at different shear rates and for different temperatures.

In addition to shear rate-controlled measurements, long-term measurements were carried out.

Figure 3 (C) shows the course of the dynamic viscosity during the long-term measurements for all four suspensions at a constant shear rate of 10/s over 2 h. While the dynamic viscosity of the white zirconia suspensions (*zirconia white – 1* and *zirconia white – 2*) is nearly constant (**Table 3**), the dynamic viscosity tends to decrease slightly of the black zirconia (*zirconia black – 1* and *zirconia black – 2*).

After the empirical determination of the dosing parameters the manufacturing of single component, three dimensional structures became manageable for each suspension. **Figure 4 (A)** shows a complex sintered test structure based on the suspension made of *zirconia white – 1* and additively manufactured by T3DP. The same test structure additively manufactured by T3DP and the *zirconia black – 1*-suspension is shown in **Figure 4 (B)**.

Figure 4 (C) shows a sintered test structure based on the zirconia suspensions of the *zirconia white – 2*, **Figure 4 (D)** a sintered test structure based on *zirconia black – 2*. Subsequent to the manufacturing of the single-color components the manufacturing of multi-color components took place. The **Figure 4 (D)** to **4 (F)** show some sintered multi-color zirconia components additive manufacturing using the T3DP.

Figure 5 (A) and **Figure 5 (B)** show FESEM-images of the microstructure of multi-color components with a clearly distinguishable interface between the two suspensions based on the zirconia powders *zirconia white – 1* (top) and *zirconia black – 1* (bottom).

An energy-dispersive X-ray spectroscopic analysis (EDX) showed that in the microstructure of the sintered and *zirconia black – 1* more alumina crust occurs (**Figures 6 (A-C)**). To evaluate the composition of the and *zirconia black – 1*-microstructure especially in the dark areas more in detail further EDX investigations took place (**Figures 6 (D-G)**) which showed the precipitation of alumina (**Figure 6 (E)**).

FIGURE AND TABLE LEGENDS:

Figure 1: CAD-drawing of used T3DP-device with three micro dispensing units and one surface scanner.

Figure 2: FESEM-image of used zirconia granulates. (A) *zirconia white – 1* granulates – overview and **(B)** surface; **(C)** *zirconia black – 1* granulates – overview and **(D)** surface; **(E)** *zirconia white – 2* granulates – overview and **(F)** surface; **(G)** *zirconia black – 2* granulates – overview and **(H)** surface.

Figure 3: Rheological behavior of thermoplastic suspensions. (A) based on the zirconia powders *zirconia white – 1* and *zirconia black – 1*; **(B)** based on the zirconia powders *zirconia white – 2* and *zirconia black – 2*; **(C)** comparison of all four suspensions during a long-term measurement at a constant shear rate of 10/s.

Figure 4: Sintered single- and multi-material test structures additively manufactured by T3DP (A) based on *zirconia white – 1* -suspension; **(B)** based on *zirconia black – 1* -suspension; **(C)**

based on *zirconia white – 2* -suspension; **(D)** based on *zirconia black – 2* -suspension; **(E)** based on *zirconia white – 1* - and *zirconia black – 1* -suspension; **(F)** based on *zirconia white – 2*- and *zirconia black – 2* -suspension – frame-like structure and **(G)** ring-like structure.

Figure 5: FESEM-images. FESEM-images of cross section at interface between sintered *zirconia white – 1* (top) and *zirconia black – 1* (bottom); **(A)** planar interface and **(B)** interwoven interface

Figure 6: Results of EDX measurements at sintered *zirconia white – 1* / *zirconia black – 1* - interface. **(A)** Overview about measurement fields 1 + 2 and **(D)** 3 – 5; results of measurement **(B)** field 1, **(C)** field 2, **(E)** field 3, **(F)** field 4 and **(G)** field 5.

Figure 7: Mass change of the *zirconia white – 1*- and *zirconia black – 1* -suspensions during thermal decomposition

Table 1: Dynamic viscosity of thermoplastic suspensions based on the zirconia powders *zirconia white – 1* and *zirconia black – 1*.

Table 2: Dynamic viscosity of thermoplastic suspensions based on the zirconia powders *zirconia white – 2* and *zirconia black – 2*.

Table 3: Dynamic viscosity of all four suspensions during the long-term measurement at a constant shear rate of 10/s.

DISCUSSION:

The characterization of the rheological behavior of the molten suspension at high shear rates up to 5000/s is necessary since the assessment of the conditions within the used micro dispensing systems (geometry of piston and nozzle chamber, velocity of piston) revealed that shear rates of 5000/s and higher are generated in the micro dispensing system during the deposition process²⁵.

The investigation of the printing parameters should be done to aid with the calibration of the dispenser for the manufacturing of multi-material components. The influence of the dispenser parameters on the properties of the materials has been discussed in²⁵. Parameter value boundaries have only been determined empirically. Experience so far shows that the variance in droplet chain height and width should not exceed 3%. Diameter differences up to 100 microns and height differences up to 50 microns can be compensated by the parameters pulse width, droplet fusion factor (DFF) and extrusion width (slicing parameter).

It is critical for the printing process that the layer heights of the different materials are adjusted to each other by changing the distance between the single droplets since it would result in an unevenness within a layer if the heights of the different materials do not match. An unevenness leads to large defects and faulty components. By reducing the distance between two droplets and the associated greater overlap, the width and height of the droplet chain increases due to the nearly constant volume of the single droplets. It can be observed that the droplet chain width increases faster than the droplet chain height. It is not necessary and probably not possible to

realize perfectly shaped hemispheres as single droplets, but you have to make sure by determining the fitting dispensing parameters that the homogeneity of the droplet formation is very high to guarantee a homogeneous building of the components.

The measurement at 85 °C simulates the rheological behavior of the suspensions in the feeding cartridge of the micro dispensing system. Above 90 °C, the decomposition of the binder components begins (**Figure 7**). All suspensions show nearly similar behavior. The used nozzle temperature of the micro dispensing system was 100 °C. This temperature promotes the droplet formation due to the low viscosity caused by increasing the suspensions temperature while passing the nozzle. Because of the short dwell time of the suspensions within the nozzle at this temperature the decomposition is not influencing the material behavior significantly.

The multi-color components could be sintered nearly defect-free, but for the *zirconia black* – 2 and *zirconia white* – 2 powders the color of the white phase turned into pink. The cause for the color change is diffusion processes between the different materials during sintering. This is only an effect at the surface and can be removed by a grinding step. But this is very challenging for complex structures made by AM technologies.

Within the multi-color components, planar and interwoven boundary interfaces developed between the two different compositions. Thus, regardless of the drop-bound deposition of the material, the arrangement of the different microstructures can be realized very precisely. Furthermore, the droplet shape can be exploited to increase the boundary interface between two materials. So far only discrete material transitions have been produced. Future research may also involve the production of gradual changes between materials.

ACKNOWLEDGMENTS:

This project has received funding from the European Union's Horizon 2020 Research and Innovation Program under Grant Agreement No 678503.

DISCLOSURES:


The authors have nothing to disclose.


REFERENCES


1. Kieback, B., Neubrand, A., Riedel, H. Processing techniques for functionally graded materials. *Materials Science and Engineering - A*. **362** (1–2), 81–106, DOI: 10.1016/S0921-5093(03)00578-1 (2003).
2. Mortensen, A., Suresh, S. Functionally graded metals and metal-ceramic composites: Part 1 Processing. *International Materials Reviews*. **40** (6), 239-265, DOI: 10.1179/imr.1995.40.6.239 (1995).
3. Moya, J.S., Sánchez-Herencia, A.J., Requena, J., Moreno, R. Functionally gradient ceramics by sequential slip casting. *Materials Letters*. **14** (5), 333-335, DOI: 10.1016/0167-577X(92)90048-O (1992).


4. Moya, J.S., Sánchez-Herencia, J.A., Bartolomé, J.F., Tanimoto, T. Elastic modulus in rigid Al₂O₃/ZrO₂ ceramic laminates. *Scripta Materialia*. **37** (7), 1095–1103, DOI: 10.1016/S1359-6462(97)00205-4 (1997).
5. Zschippang, E., Mannschatz, A., Klemm, H., Moritz, T., Martin, H.-P. Charakterisierung und Verarbeitung von Si₃N₄-SiC-MoSi₂-Kompositen für Heizleiteranwendungen, *Keramische Zeitschrift*, 05, 294-297, (2013).
6. Scheithauer, U., Haderk, K., Richter, H.-J., Petasch, U., Michaelis, A. Influence of the kind and amount of pore forming agents on the thermal shock behaviour of carbon-free refractory components produced by multilayer technology. *refractories WORLDFORUM*. **4** (1), 130-136, (2011).
7. Scheithauer, U., Schwarzer, E., Slawik, T., Richter, H.-J., Moritz, T., Michaelis, A. Functionally Graded Materials Made by Water-Based Multilayer Technology. *Refractories Worldforum*. **8** (2), 95 – 101, (2016).
8. Mannschatz, A., Härtel, A., Müller-Köhn, A., Moritz, T., Michaelis, A., Wilde, M. Manufacturing of Two-colored Co-sintered Zirconia Components by Inmold-labelling and 2C-Injection Molding, *cfi/Ber. DKG*. **91** (8), (2014).
9. Moritz, T., Scheithauer, U., Mannschatz, A., Ahlhelm, M., Abel, J., Schwarzer, E., Pohl, M., Müller-Köhn, A. Material- and process hybridization for multifunctional ceramic and glass components. *Ceramic Applications*. **5** (2), 66-71, (2017).
10. Homa, J. Rapid Prototyping of high-performance ceramics opens new opportunities for the CIM industry. *Powder Injection Moulding International*. **6** (3), 65-68, (2012)
11. T. Chartier and A. Badev, Rapid Prototyping of Ceramics. *Handbook of Advanced Ceramics Elsevier*. Oxford, UK, (2013).
12. N. Travitzky, *et al.* Additive Manufacturing of ceramic-based materials. *Advanced Engineering Materials*. **16**, 729-754, DOI: 10.1002/adem.201400097 (2014).
13. A. Zocca, P. Colombo, C. M. Gomes, J. Günster, Additive Manufacturing of Ceramics: Issues, Potentialities, and Opportunities. *Journal of the American Ceramic Society*. **98** (7), 1983-2001, DOI: 10.1111/jace.13700 (2015).
14. Scheithauer, U., Schwarzer, E., Richter, H.J., Moritz, T. Thermoplastic 3D Printing – An Additive Manufacturing Method for Producing Dense Ceramics. *JACT*. **12** (1), 26-31, DOI: 10.1111/ijac.12306 (2014).
15. Scheithauer, U., Bergner, A., Schwarzer, E., Richter, H.-J., Moritz, T. Studies on thermoplastic 3D printing of steel–zirconia composites. *J Mat Res*. **29** (17), 1931 – 1940, DOI: 10.1557/jmr.2014.209 (2014).
16. Scheithauer, U., Slawik, T., Schwarzer, E., Richter, H.-J., Moritz, T., Michaelis, A. Additive Manufacturing of Metal-Ceramic-Composites by Thermoplastic 3D-Printing. *J. Ceram. Sci. Tech*. **06** (02), 125-132, DOI: 10.4416/JCST2014-00045 (2015).
17. Scheithauer, U., Schwarzer, E., Haertel, A., Richter, H.J., Moritz, T.; Michaelis, A. Processing of thermoplastic suspensions for Additive Manufacturing of Ceramic- and Metal-Ceramic-Composites by Thermoplastic 3D-Printing (T3DP), 11th International Conference on Ceramic Materials and Components for Energy and Environmental Applications, *Ceramic Transactions*. **256** (2016).
18. Scheithauer, U., Weingarten, S., Johne, R., Schwarzer, E., Abel, J., Richter, H., Moritz, T., Michaelis, A. Ceramic-Based 4D-Components: Additive Manufacturing (AM) of Ceramic-

- Based Functionally Graded Materials (FGM) by Thermoplastic 3D-Printing (T3DP).
Preprints, 2017100057, DOI: 10.20944/preprints201710.0057.v1 (2017).
19. Lee, H.C., Potapova, Y., Lee, D. A core-shell structured, metal-ceramic composite supported Ru catalyst for methane steam reforming. *J of Power Sources*. **216**, 256-260, DOI: 10.1016/j.jpowsour.2012.05.056 (2012).
20. Molin, S., Tolczyk, M., Gazda, M., Jasinski, P. Stainless steel/yttria stabilized zirconia composite supported solid oxide fuel cell. *J. Fuel Cell Sci. Technol.*. **8**, 1-5, DOI: 10.1016/j.jpowsour.2016.05.076 (2011).
21. Roberts H.W., Berzins D.W., Moore B.K., Charlton D.G. Metal-Ceramic Alloys in Dentistry: A Review. *Journal of Prosthodontics*. **18** (2), 188–194, DOI: 10.1111/j.1532-849X.2008.00377.x (2009).
22. Largiller, G., Bouvard, D., Carry, C.P., Gabriel, A., Müller, J., Staab, C. Deformation and cracking during sintering of bimaterial components processed from ceramic and metal powder mixes. Part I: Experimental investigation. *Mechanics of Materials*. **53**, 123-131, DOI: 10.1016/j.mechmat.2012.04.002 (2012).
23. Meulenbergh, W. A., Mertens, J., Bram, M., Buchkremer, H.-P., Stöver, D. Graded porous TiO₂ membranes for micro-filtration. *Journal European Ceramic Society*. **26**, 449-454, DOI: 10.1016/j.jeurceramsoc.2005.06.035 (2006).
24. Baumann, A., Moritz, T., Lenk, R. Multi component powder injection moulding of metal-ceramic-composites. *Proceedings of the Euro International Powder Metallurgy Congress and Exhibition*. (2009).
25. Scheithauer, U., Johne, R., Weingarten, S., Schwarzer, E., Abel, J., Richter, H., Moritz, T., Michaelis, A. Investigation of Droplet Deposition for Suspensions Usable for Thermoplastic 3D Printing (T3DP). *Journal of Materials Engineering and Performance*. DOI: 10.1007/s11665-017-2875-4 (2017).

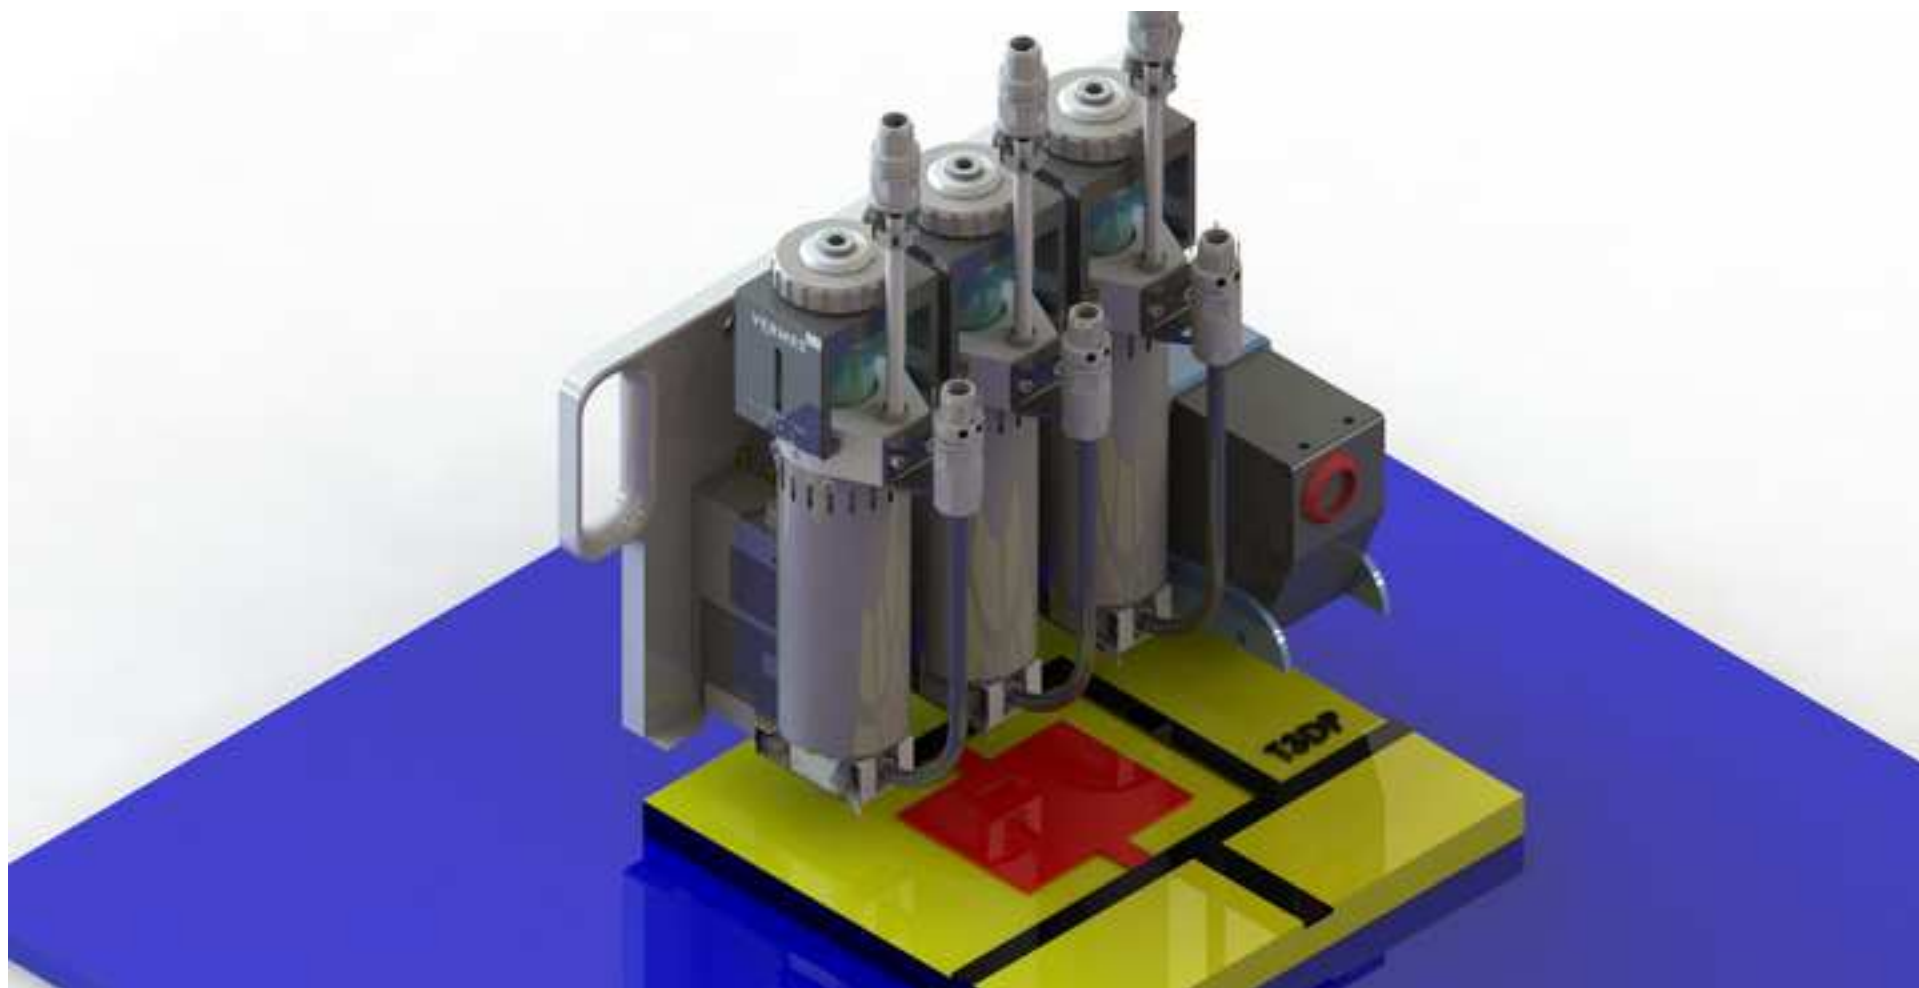

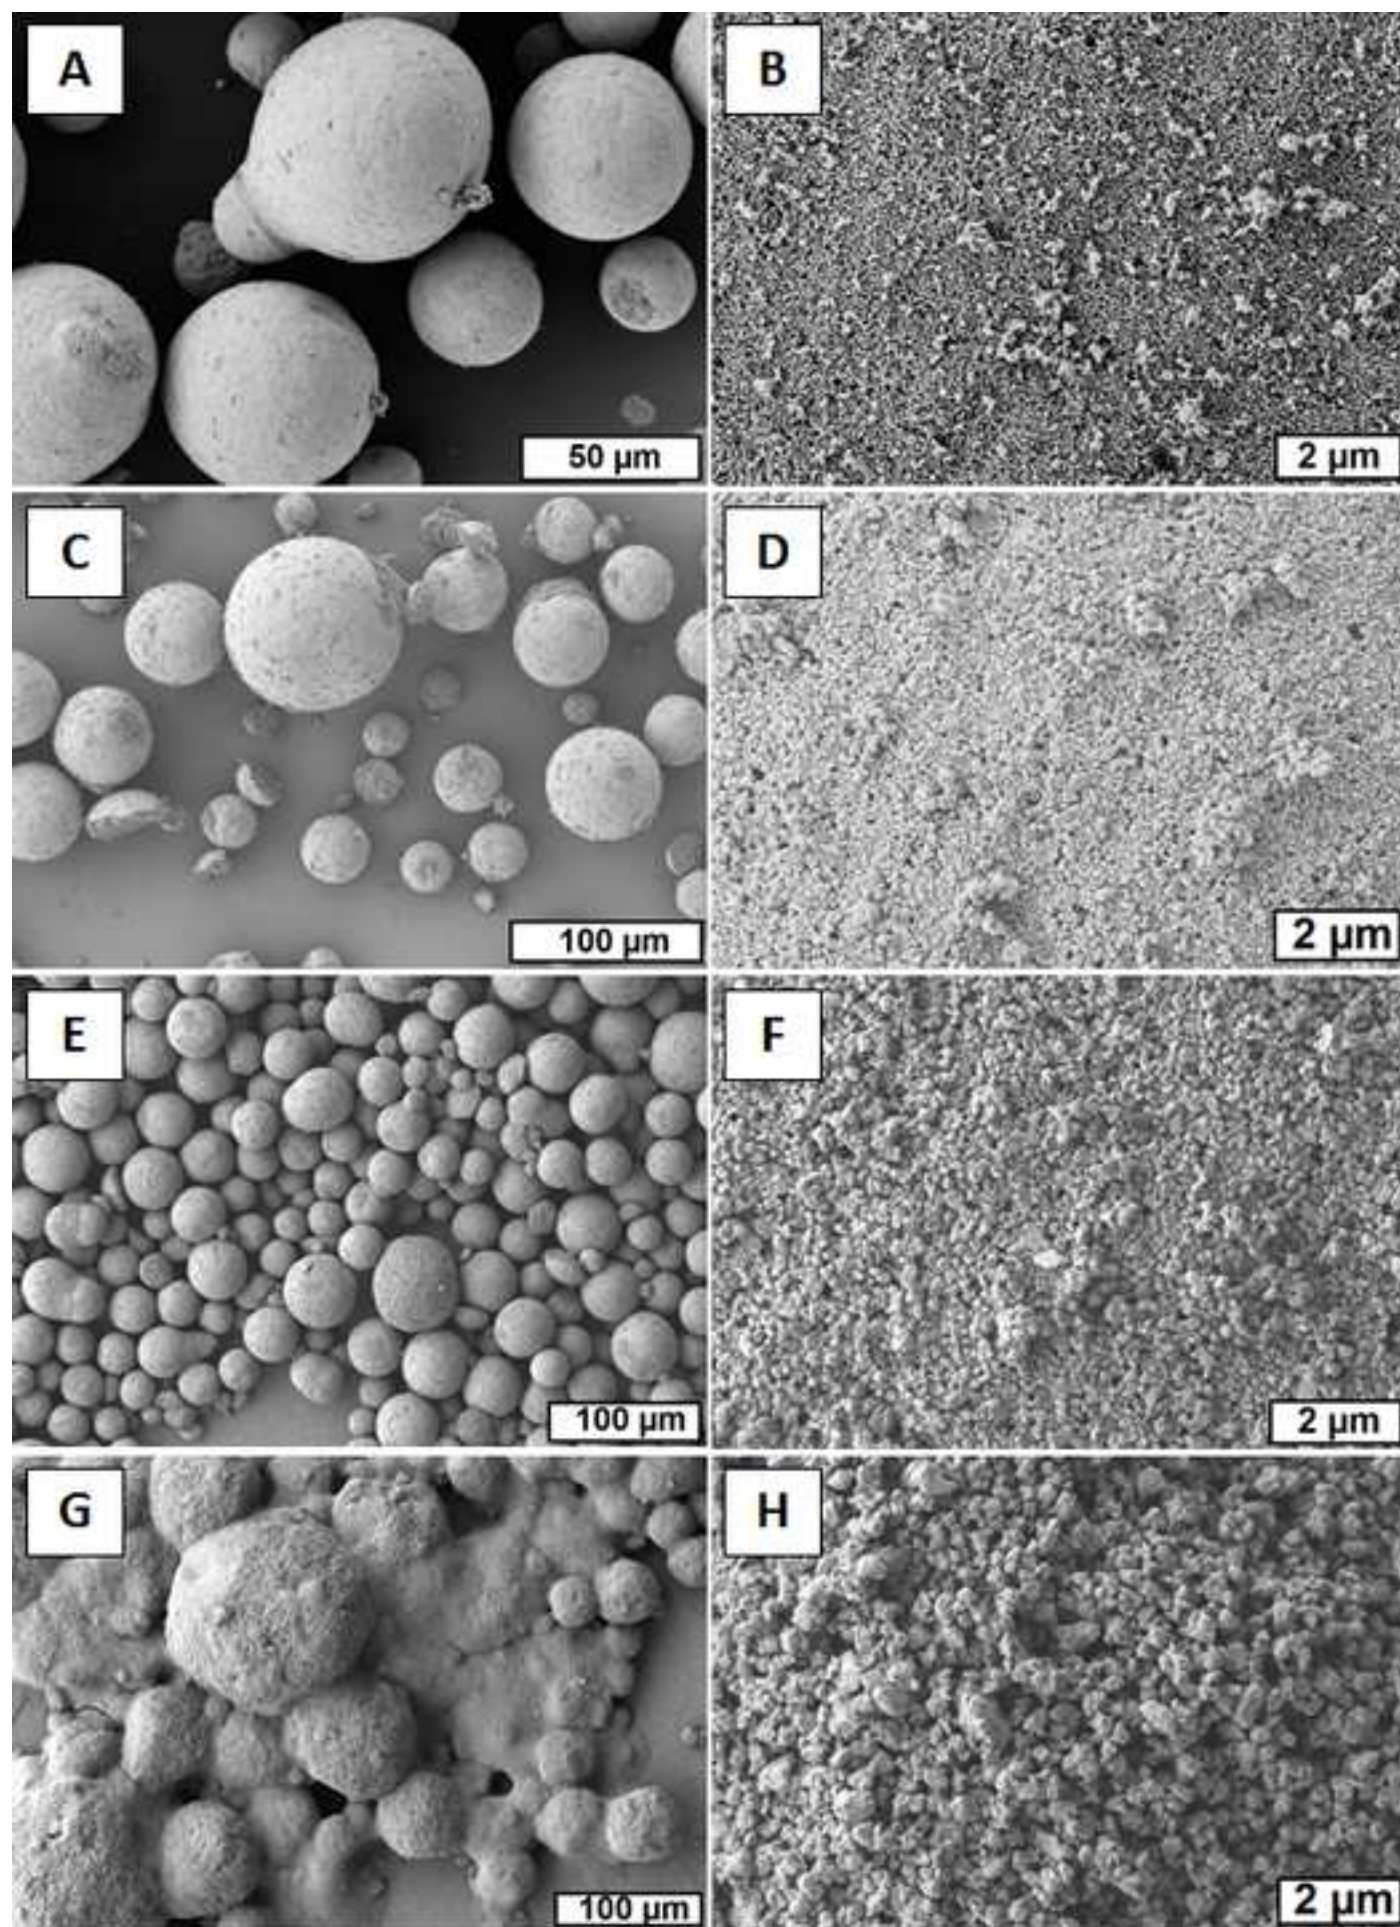

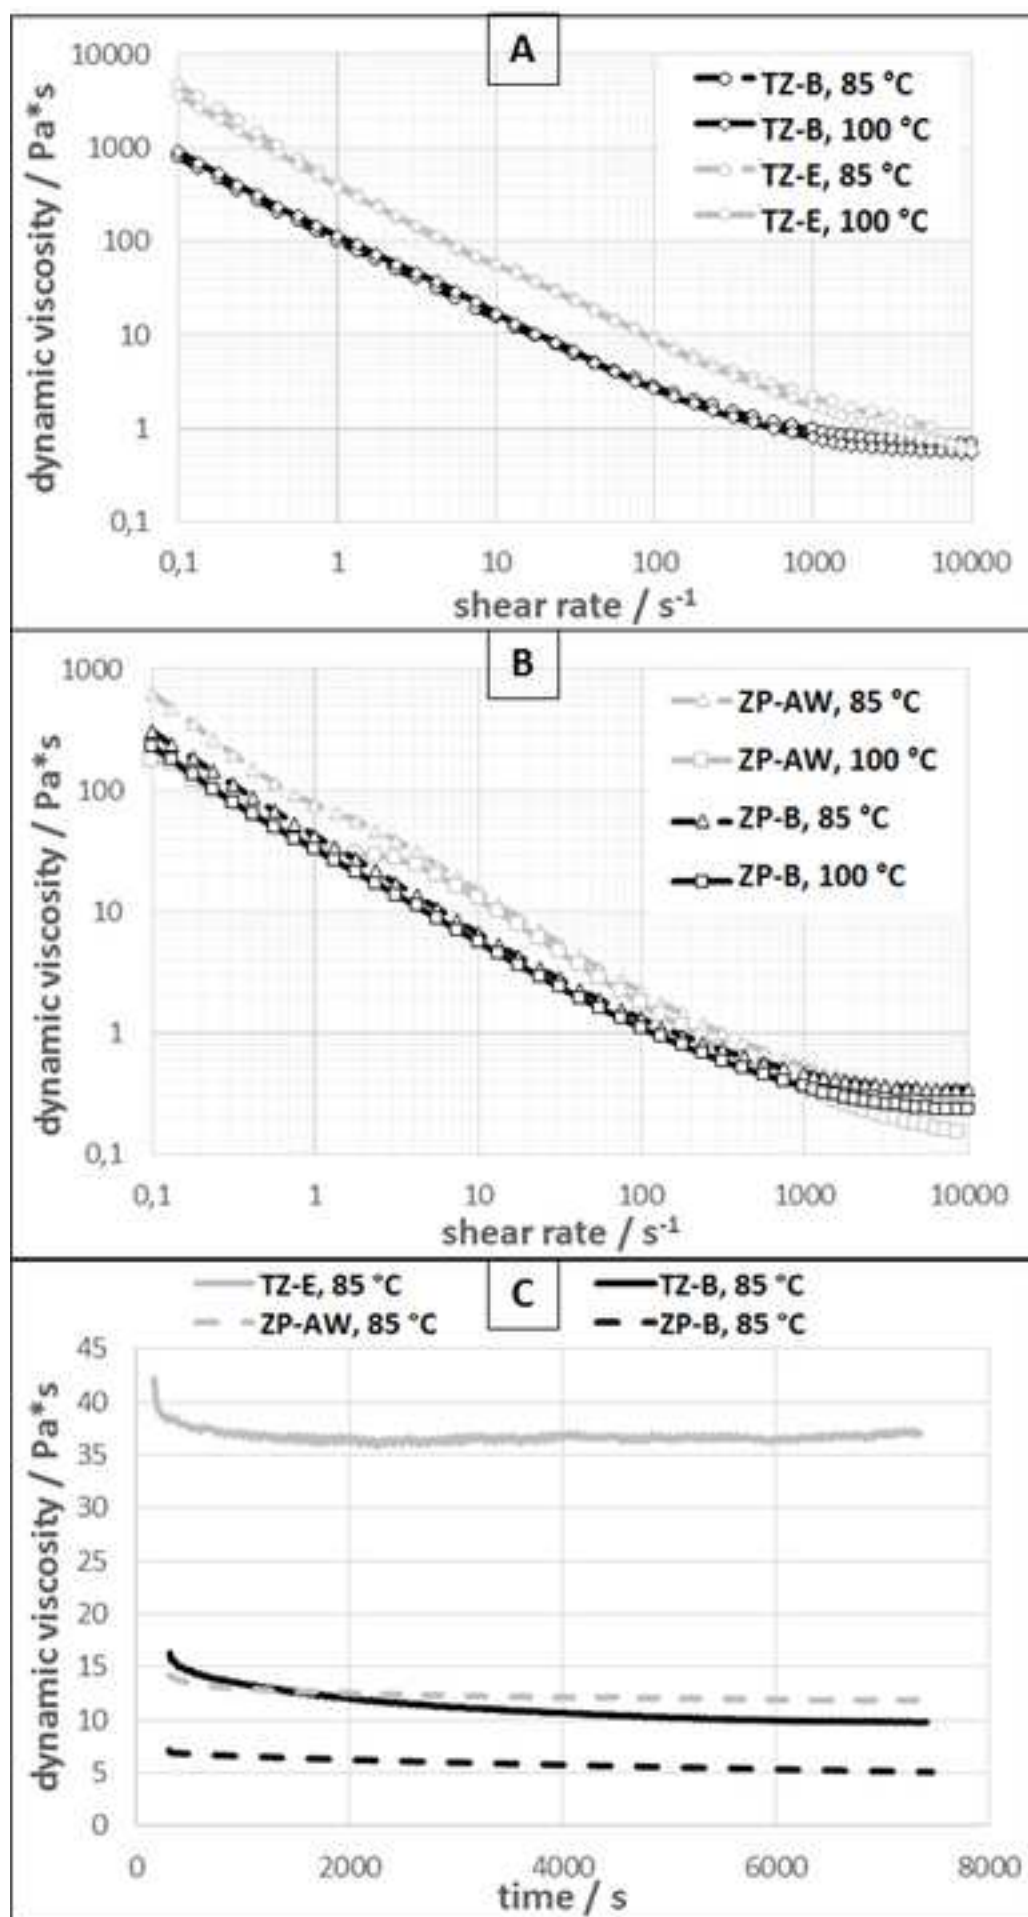

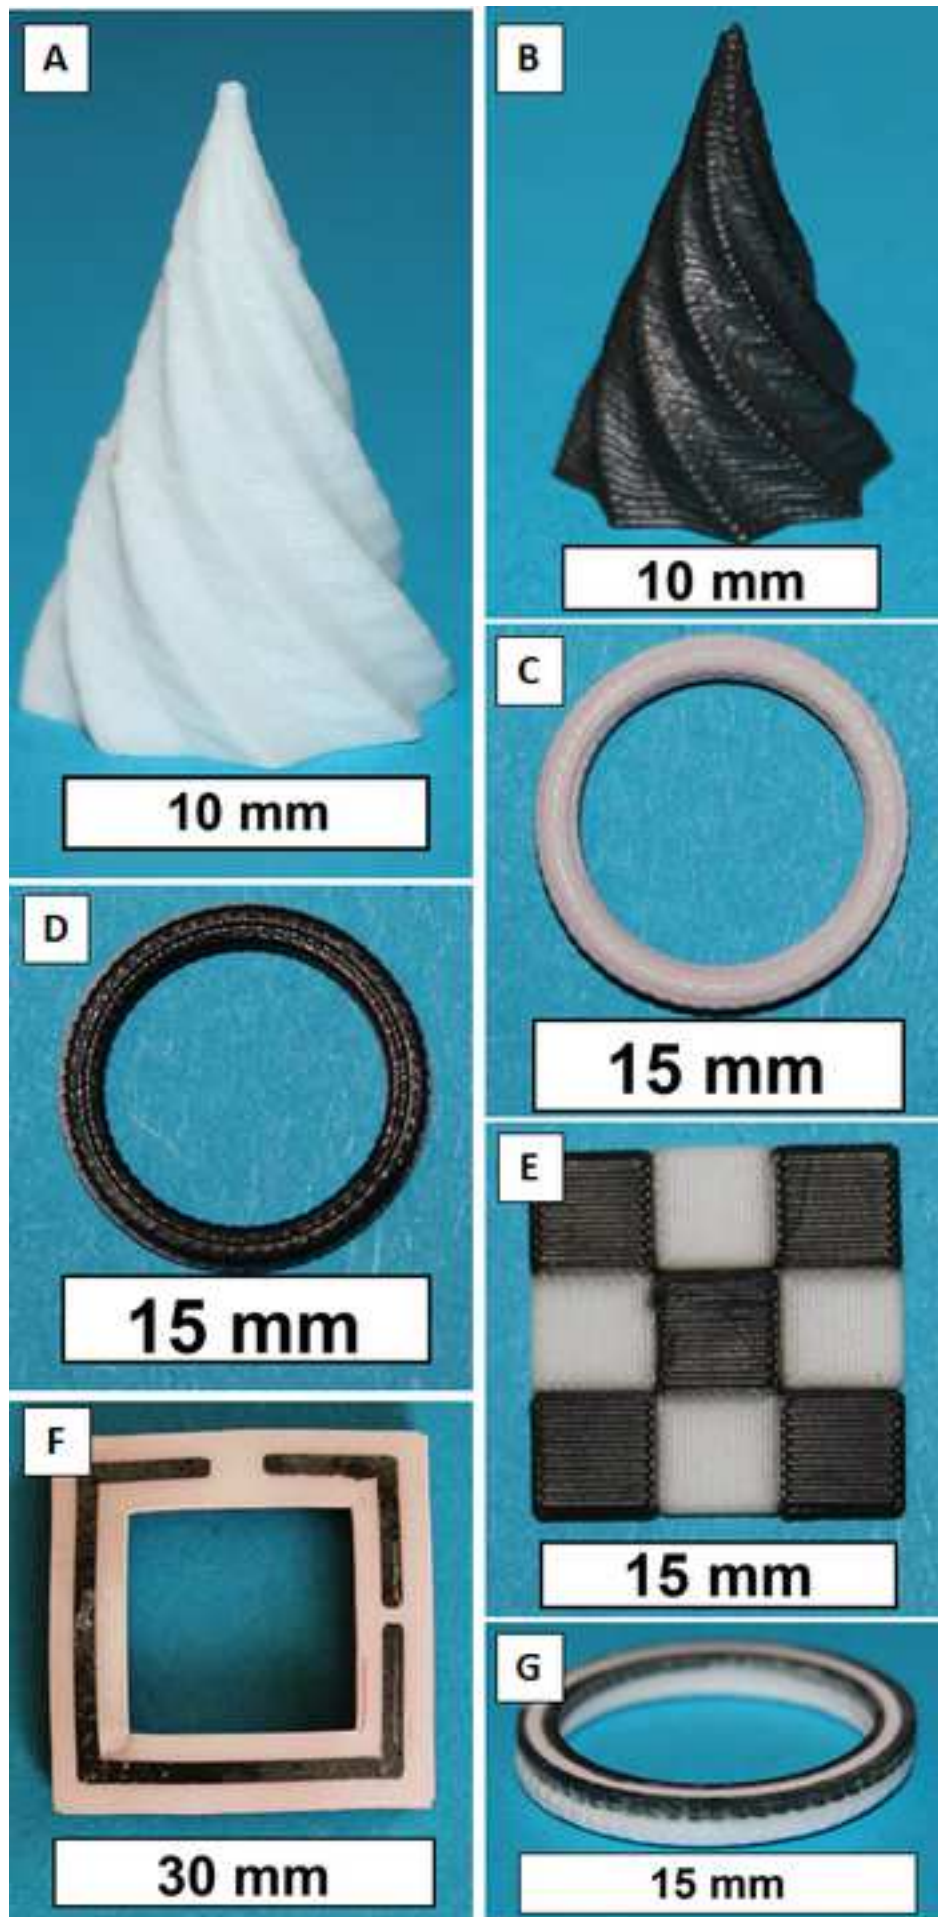

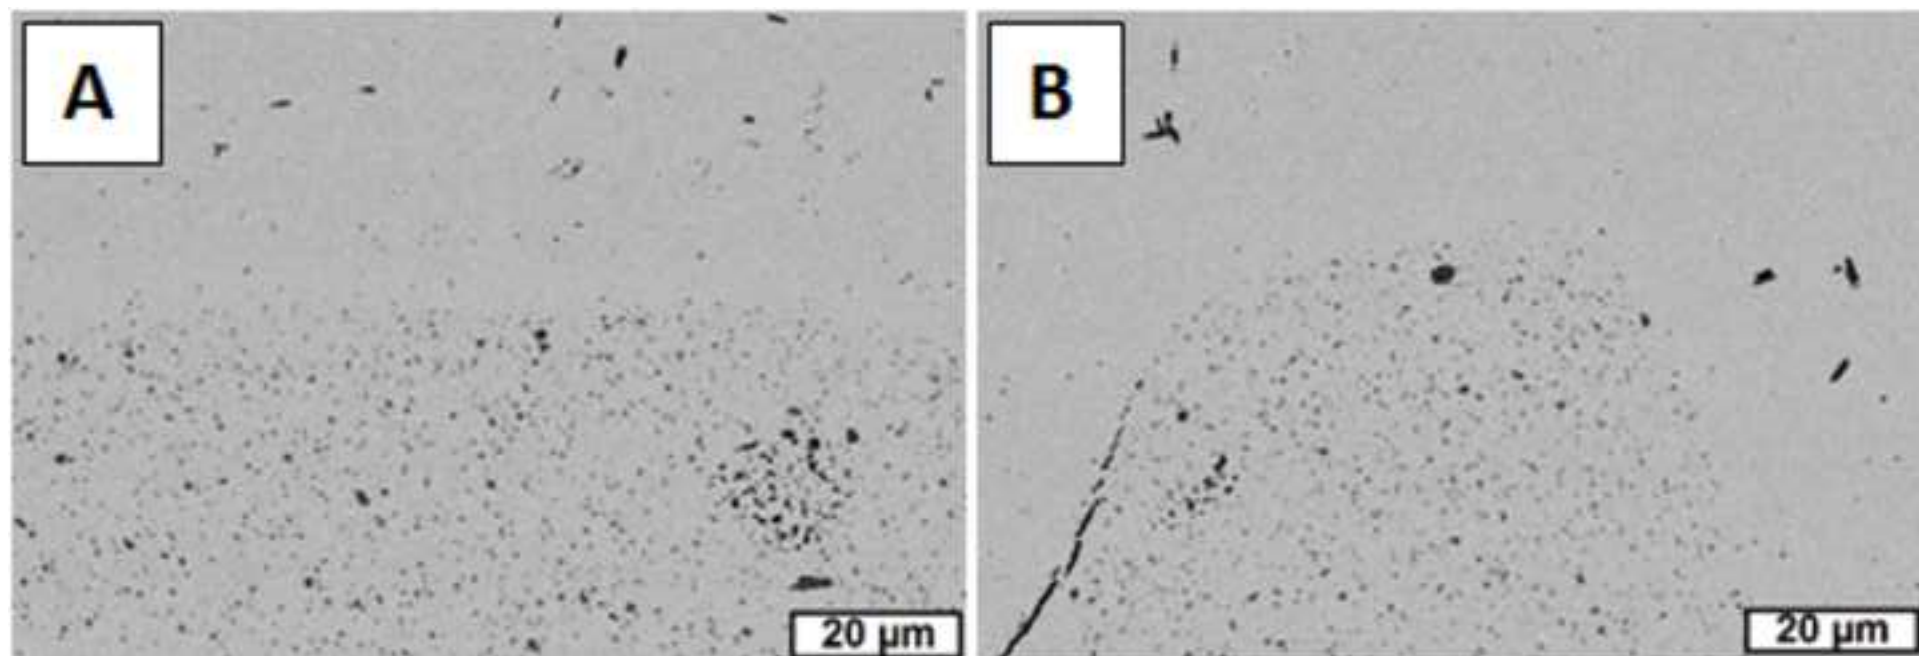


Figure 6








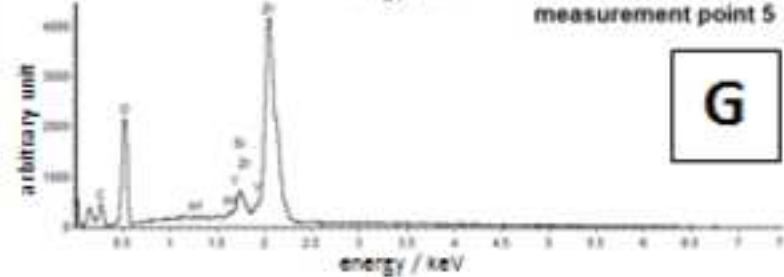


Figure 7

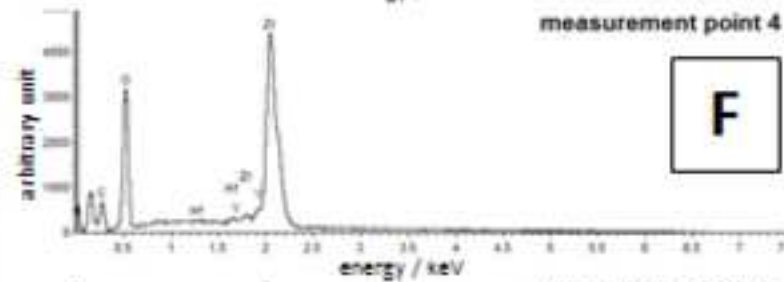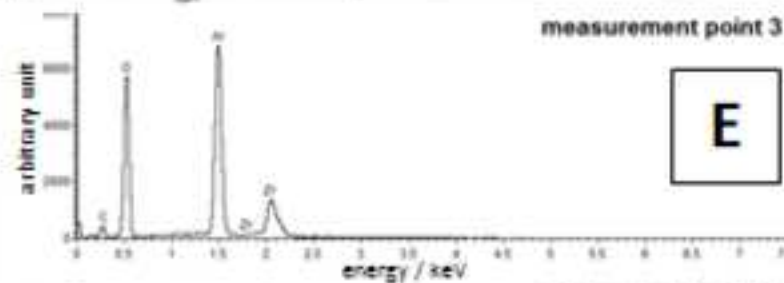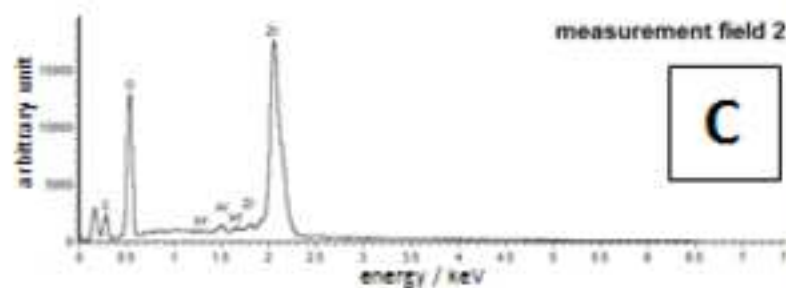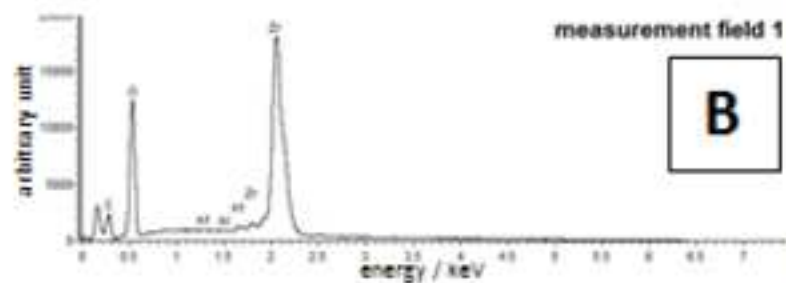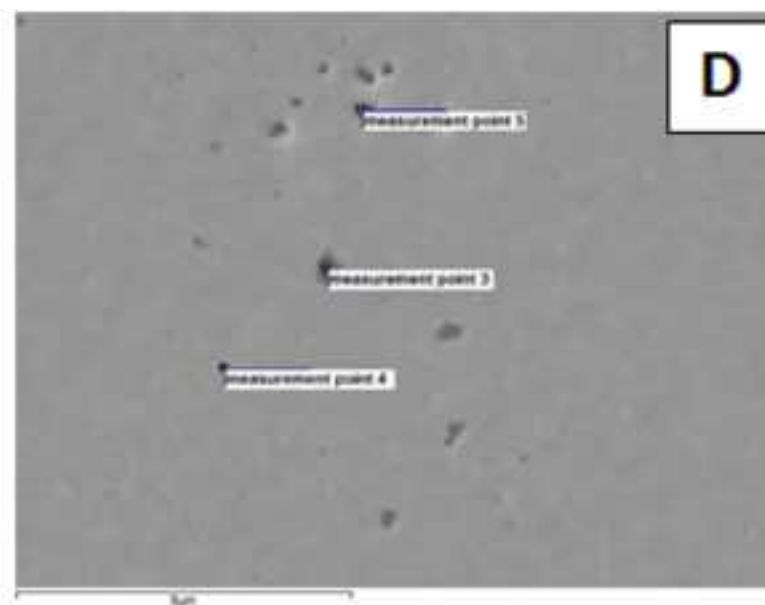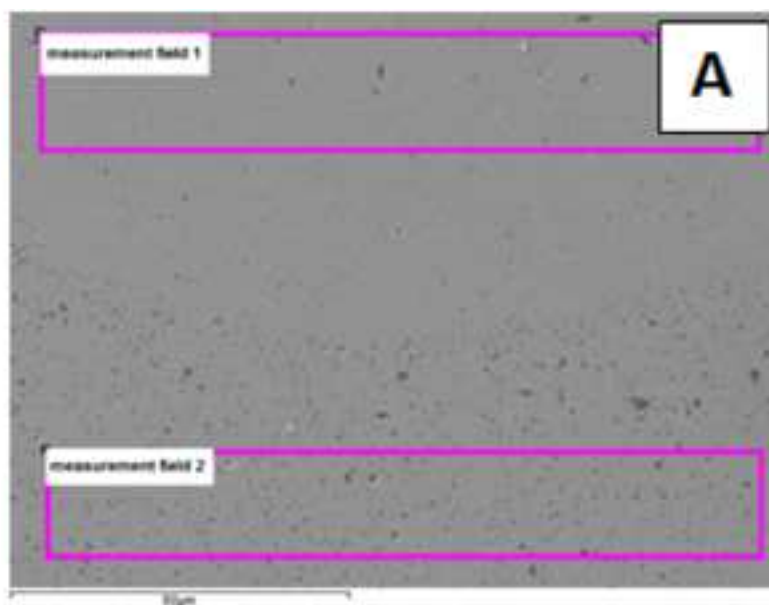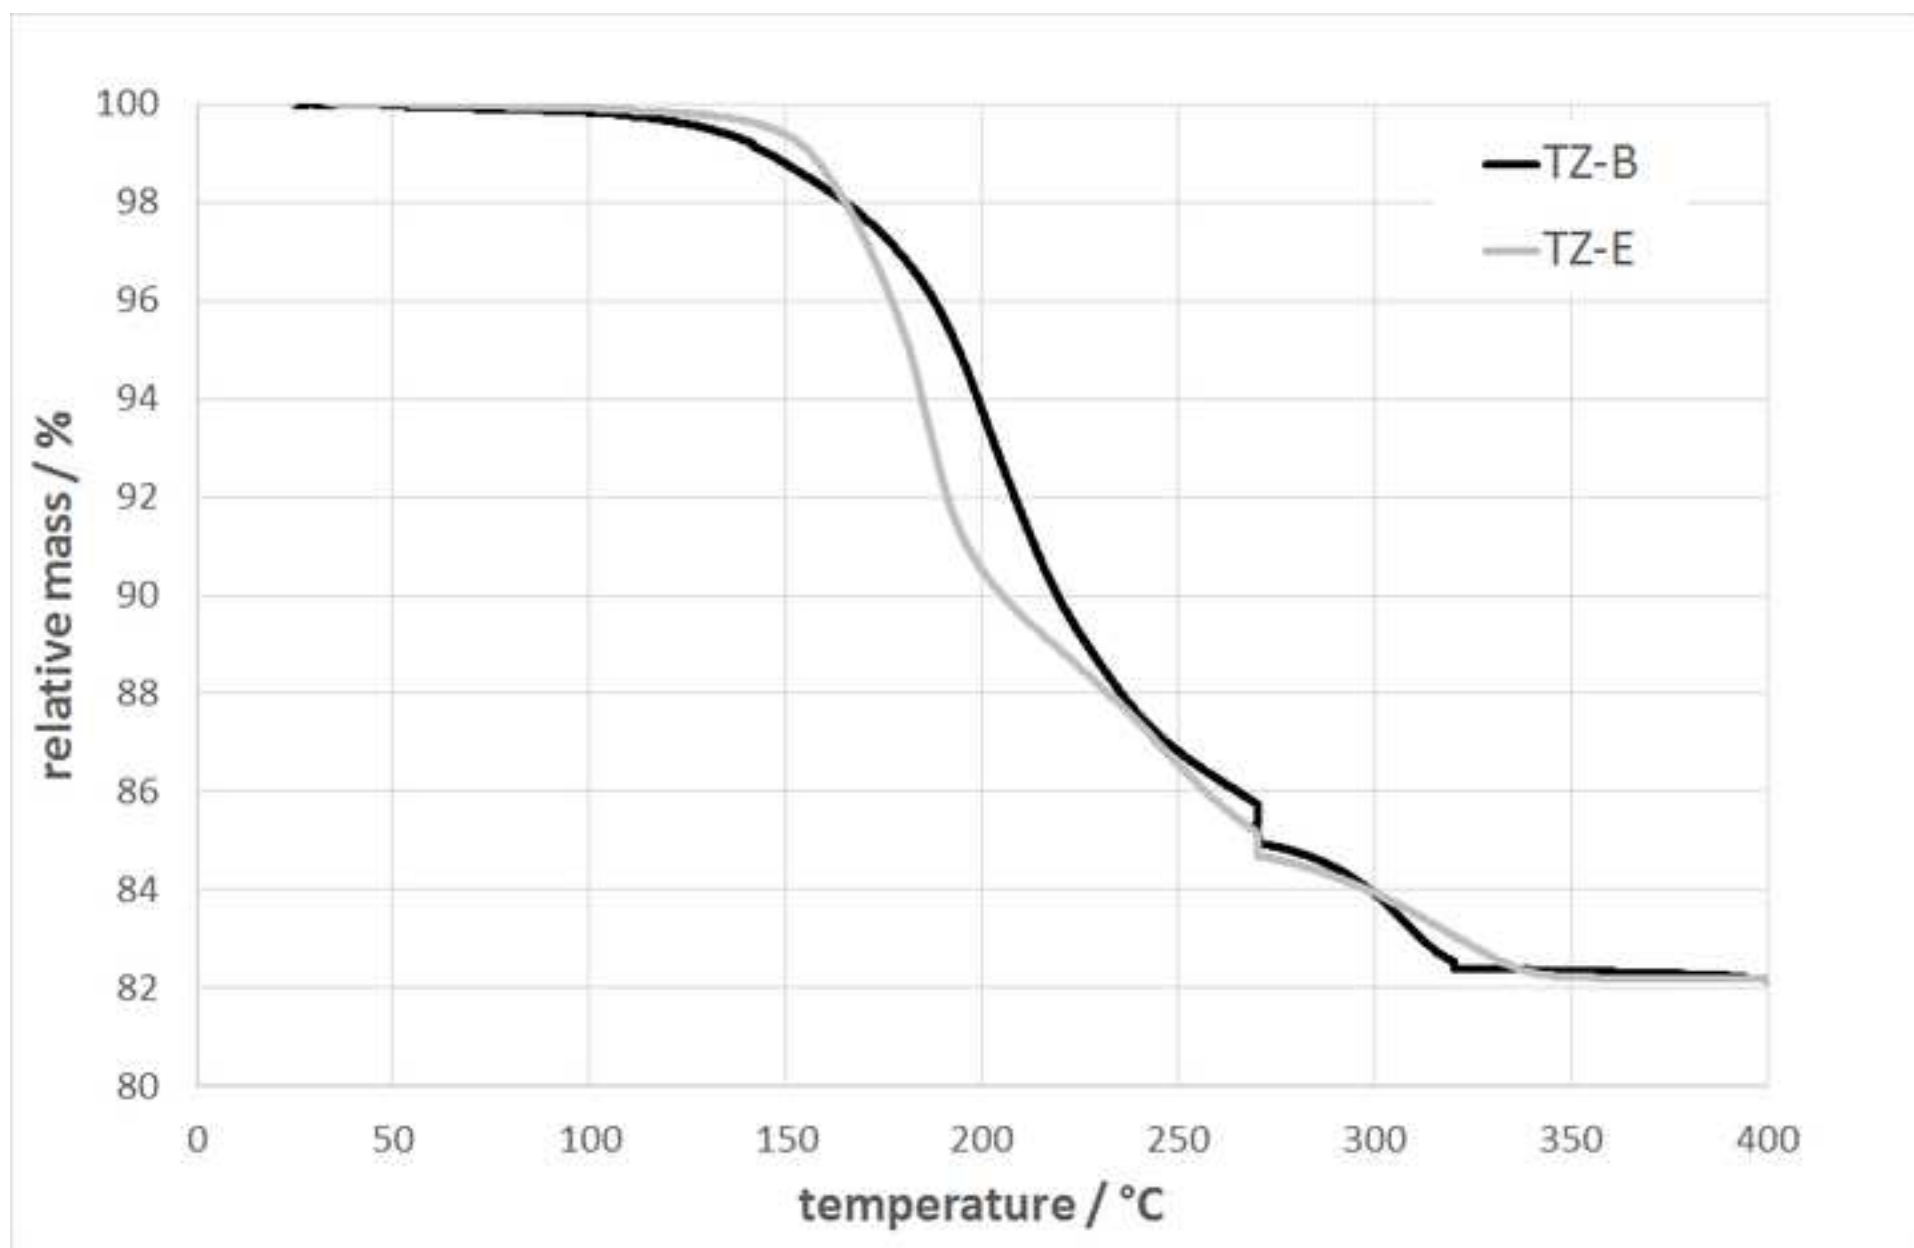

<i>dynamic viscosity / Pa·s</i>	<i>used zirconia powder</i>	<i>temperature / °C</i>	<i>shear rate / s⁻¹</i>					
			<i>0.1</i>	<i>1</i>	<i>10</i>	<i>100</i>	<i>1000</i>	<i>10000</i>
	TZ-E	85	4600	414	56.60	8.98	2.16	0.59
		100	3630	386	56.00	8.96	1.75	0.57
	TZ-B	85	791	99	15.20	2.82	0.97	0.67
		100	905	114	13.30	2.66	0.81	0.55

<i>dynamic viscosity / Pa·s</i>	<i>used zirconia powder</i>	<i>temperature / °C</i>	<i>shear rate / s⁻¹</i>					
			<i>0.1</i>	<i>1</i>	<i>10</i>	<i>100</i>	<i>1000</i>	<i>10000</i>
	ZP-AW	85	637	76.50	14.8	2.19	0.54	0.30
		100	173	35.5	12.7	1.74	0.35	0.15
	ZP-B	85	310	42.4	6.66	1.31	0.47	0.35
		100	231	32.7	5.64	1.1	0.36	0.23

<i>dynamic viscosity / Pa·s</i>	<i>used zirconia powder</i>	<i>time / s</i>						
		<i>1000</i>	<i>2000</i>	<i>3000</i>	<i>4000</i>	<i>5000</i>	<i>6000</i>	<i>7000</i>
	TZ-E	36.8	36.7	36.8	36.7	36.8	36.6	36.8
	TZ-B	13.4	12.0	11.2	10.7	10.2	9.95	9.84
	ZP-AW	13.0	12.6	12.3	12.1	12.0	11.9	11.9
	ZP-B	6.5	6.2	6.0	5.8	5.6	5.4	5.2

Name of Material/ Equipment	Company	Catalog Number	Comments/Description
zirconia powder, white, TZ-3Y-E	Tosoh		
zirconia powder, black, TZ-3Y-Black	Tosoh		
zirconia powder, white, ZirPro ColorYZ Arctic White	Saint Gobain		
zirconia powder, black, ZirPro ColorYZ Black	Saint Gobain		

designation in manuscript	Name of Material
Zirconia black - 1	TZ-3Y-Black
Zirconia black - 2	ZirPro ColorYZ Black
Zirconia white - 1	TZ-3Y-Black
Zirconia white - 2	ZirPro ColorYZ Black

designation in manuscript	Name of Equipment
laser diffractometer	Mastersizer 2000
dissolver	DISPERMAT CA 20-C
rheometer	Modular Compact Rheometer MCR 302
micro dispensing system	MDS 3250
T3DP-device	IKTS-T3DP-device "TRUDE", in-house development
profile scanner	LJ-V7020
Slicer 1	Slic3r
Slicer 2	Simplify3D
debinding furnace	NA120/45
sintering furnace	LH 15/12
FESEM	Gemini 982

Company
Tosoh
Saint Gobain
Tosoh
Saint Gobain

Company
Malvern Instruments Ltd., United Kingdom
VMA-Getzmann GmbH, Germany
Anton Paar, Graz, Austria
Vermes, Germany
Fraunhofer IKTS, not commercialized
Keyence
open source software
Simplify3D
Nabertherm, Germany
Nabertherm, Germany
Zeiss, Germany



1 Alewife Center #200
 Cambridge, MA 02140
 tel. 617.945.9051
 www.jove.com

ARTICLE AND VIDEO LICENSE AGREEMENT

Title of Article:

Multi-color ceramic based 4D components- Additive Manufacturing of black-and-white zirconia components by Thermoplastic 3D-Printing (TSDP)

Author(s):

Steven Weingarten; Uwe Scheithauer; Robert John, Johannes Abel
 Eric Schwarzer; Tassilo Moritz; Alexander Michaelis

Item 1 (check one box): The Author elects to have the Materials be made available (as described at

<http://www.jove.com/author>) via: ☐ Standard Access ☒ Open Access

Item 2 (check one box):

- ☒ The Author is NOT a United States government employee.
- ☐ The Author is a United States government employee and the Materials were prepared in the course of his or her duties as a United States government employee.
- ☐ The Author is a United States government employee but the Materials were NOT prepared in the course of his or her duties as a United States government employee.

ARTICLE AND VIDEO LICENSE AGREEMENT

1. **Defined Terms.** As used in this Article and Video License Agreement, the following terms shall have the following meanings: **"Agreement"** means this Article and Video License Agreement; **"Article"** means the article specified on the last page of this Agreement, including any associated materials such as texts, figures, tables, artwork, abstracts, or summaries contained therein; **"Author"** means the author who is a signatory to this Agreement; **"Collective Work"** means a work, such as a periodical issue, anthology or encyclopedia, in which the Materials in their entirety in unmodified form, along with a number of other contributions, constituting separate and independent works in themselves, are assembled into a collective whole; **"CRC License"** means the Creative Commons Attribution-Non Commercial-No Derivs 3.0 Unported Agreement, the terms and conditions of which can be found at: <http://creativecommons.org/licenses/by-nc-nd/3.0/legalcode>; **"Derivative Work"** means a work based upon the Materials or upon the Materials and other pre-existing works, such as a translation, musical arrangement, dramatization, fictionalization, motion picture version, sound recording, art reproduction, abridgment, condensation, or any other form in which the Materials may be recast, transformed, or adapted; **"Institution"** means the institution, listed on the last page of this Agreement, by which the Author was employed at the time of the creation of the Materials; **"JoVE"** means MyJoVE Corporation, a Massachusetts corporation and the publisher of *The Journal of Visualized Experiments*; **"Materials"** means the Article and / or the Video; **"Parties"** means the Author and JoVE; **"Video"** means any video(s) made by the Author, alone or in conjunction with any other parties, or by JoVE or its affiliates or agents, individually or in collaboration with the Author or any other parties, incorporating all or any portion of the Article, and in which the Author may or may not appear.

2. **Background.** The Author, who is the author of the Article, in order to ensure the dissemination and protection of the Article, desires to have the JoVE publish the Article and create and transmit videos based on the Article. In furtherance of such goals, the Parties desire to memorialize in this Agreement the respective rights of each Party in and to the Article and the Video.

3. **Grant of Rights in Article.** In consideration of JoVE agreeing to publish the Article, the Author hereby grants to JoVE, subject to **Sections 4 and 7** below, the exclusive, royalty-free, perpetual (for the full term of copyright in the Article, including any extensions thereto) license (a) to publish, reproduce, distribute, display and store the Article in all forms, formats and media whether now known or hereafter developed (including without limitation in print, digital and electronic form) throughout the world, (b) to translate the Article into other languages, create adaptations, summaries or extracts of the Article or other Derivative Works (including, without limitation, the Video) or Collective Works based on all or any portion of the Article and exercise all of the rights set forth in (a) above in such translations, adaptations, summaries, extracts, Derivative Works or Collective Works and (c) to license others to do any or all of the above. The foregoing rights may be exercised in all media and formats, whether now known or hereafter devised, and include the right to make such modifications as are technically necessary to exercise the rights in other media and formats. If the "Open Access" box has been checked in **Item 1** above, JoVE and the Author hereby grant to the public all such rights in the Article as provided in, but subject to all limitations and requirements set forth in, the CRC License.

ARTICLE AND VIDEO LICENSE AGREEMENT

4. **Retention of Rights in Article.** Notwithstanding the exclusive license granted to JoVE in **Section 3** above, the Author shall, with respect to the Article, retain the non-exclusive right to use all or part of the Article for the non-commercial purpose of giving lectures, presentations or teaching classes, and to post a copy of the Article on the Institution's website or the Author's personal website, in each case provided that a link to the Article on the JoVE website is provided and notice of JoVE's copyright in the Article is included. All non-copyright intellectual property rights in and to the Article, such as patent rights, shall remain with the Author.

5. **Grant of Rights in Video – Standard Access.** This **Section 5** applies if the "Standard Access" box has been checked in **Item 1** above or if no box has been checked in **Item 1** above. In consideration of JoVE agreeing to produce, display or otherwise assist with the Video, the Author hereby acknowledges and agrees that, Subject to **Section 7** below, JoVE is and shall be the sole and exclusive owner of all rights of any nature, including, without limitation, all copyrights, in and to the Video. To the extent that, by law, the Author is deemed, now or at any time in the future, to have any rights of any nature in or to the Video, the Author hereby disclaims all such rights and transfers all such rights to JoVE.

6. **Grant of Rights in Video – Open Access.** This **Section 6** applies only if the "Open Access" box has been checked in **Item 1** above. In consideration of JoVE agreeing to produce, display or otherwise assist with the Video, the Author hereby grants to JoVE, subject to **Section 7** below, the exclusive, royalty-free, perpetual (for the full term of copyright in the Article, including any extensions thereto) license (a) to publish, reproduce, distribute, display and store the Video in all forms, formats and media whether now known or hereafter developed (including without limitation in print, digital and electronic form) throughout the world, (b) to translate the Video into other languages, create adaptations, summaries or extracts of the Video or other Derivative Works or Collective Works based on all or any portion of the Video and exercise all of the rights set forth in (a) above in such translations, adaptations, summaries, extracts, Derivative Works or Collective Works and (c) to license others to do any or all of the above. The foregoing rights may be exercised in all media and formats, whether now known or hereafter devised, and include the right to make such modifications as are technically necessary to exercise the rights in other media and formats. For any Video to which this Section 6 is applicable, JoVE and the Author hereby grant to the public all such rights in the Video as provided in, but subject to all limitations and requirements set forth in, the CRC License.

7. **Government Employees.** If the Author is a United States government employee and the Article was prepared in the course of his or her duties as a United States government employee, as indicated in **Item 2** above, and any of the licenses or grants granted by the Author hereunder exceed the scope of the 17 U.S.C. 403, then the rights granted hereunder shall be limited to the maximum rights permitted under such

statute. In such case, all provisions contained herein that are not in conflict with such statute shall remain in full force and effect, and all provisions contained herein that do so conflict shall be deemed to be amended so as to provide to JoVE the maximum rights permissible within such statute.

8. **Likeness, Privacy, Personality.** The Author hereby grants JoVE the right to use the Author's name, voice, likeness, picture, photograph, image, biography and performance in any way, commercial or otherwise, in connection with the Materials and the sale, promotion and distribution thereof. The Author hereby waives any and all rights he or she may have, relating to his or her appearance in the Video or otherwise relating to the Materials, under all applicable privacy, likeness, personality or similar laws.

9. **Author Warranties.** The Author represents and warrants that the Article is original, that it has not been published, that the copyright interest is owned by the Author (or, if more than one author is listed at the beginning of this Agreement, by such authors collectively) and has not been assigned, licensed, or otherwise transferred to any other party. The Author represents and warrants that the author(s) listed at the top of this Agreement are the only authors of the Materials. If more than one author is listed at the top of this Agreement and if any such author has not entered into a separate Article and Video License Agreement with JoVE relating to the Materials, the Author represents and warrants that the Author has been authorized by each of the other such authors to execute this Agreement on his or her behalf and to bind him or her with respect to the terms of this Agreement as if each of them had been a party hereto as an Author. The Author warrants that the use, reproduction, distribution, public or private performance or display, and/or modification of all or any portion of the Materials does not and will not violate, infringe and/or misappropriate the patent, trademark, intellectual property or other rights of any third party. The Author represents and warrants that it has and will continue to comply with all government, institutional and other regulations, including, without limitation all institutional, laboratory, hospital, ethical, human and animal treatment, privacy, and all other rules, regulations, laws, procedures or guidelines, applicable to the Materials, and that all research involving human and animal subjects has been approved by the Author's relevant institutional review board.

10. **JoVE Discretion.** If the Author requests the assistance of JoVE in producing the Video in the Author's facility, the Author shall ensure that the presence of JoVE employees, agents or independent contractors is in accordance with the relevant regulations of the Author's institution. If more than one author is listed at the beginning of this Agreement, JoVE may, in its sole discretion, elect not take any action with respect to the Article until such time as it has received complete, executed Article and Video License Agreements from each such author. JoVE reserves the right, in its absolute and sole discretion and without giving any reason therefore, to accept or decline any work submitted to JoVE. JoVE and its employees, agents and independent contractors shall have

ARTICLE AND VIDEO LICENSE AGREEMENT

full, unfettered access to the facilities of the Author or of the Author's institution as necessary to make the Video, whether actually published or not. JoVE has sole discretion as to the method of making and publishing the Materials, including, without limitation, to all decisions regarding editing, lighting, filming, timing of publication, if any, length, quality, content and the like.

11. **Indemnification.** The Author agrees to indemnify JoVE and/or its successors and assigns from and against any and all claims, costs, and expenses, including attorney's fees, arising out of any breach of any warranty or other representations contained herein. The Author further agrees to indemnify and hold harmless JoVE from and against any and all claims, costs, and expenses, including attorney's fees, resulting from the breach by the Author of any representation or warranty contained herein or from allegations or instances of violation of intellectual property rights, damage to the Author's or the Author's institution's facilities, fraud, libel, defamation, research, equipment, experiments, property damage, personal injury, violations of institutional, laboratory, hospital, ethical, human and animal treatment, privacy or other rules, regulations, laws, procedures or guidelines, liabilities and other losses or damages related in any way to the submission of work to JoVE, making of videos by JoVE, or publication in JoVE or elsewhere by JoVE. The Author shall be responsible for, and shall hold JoVE harmless from, damages caused by lack of sterilization, lack of cleanliness or by contamination due to the making of a video by JoVE its employees, agents or independent contractors. All sterilization, cleanliness or decontamination procedures shall be solely the responsibility of the Author and shall be undertaken at the Author's

expense. All indemnifications provided herein shall include JoVE's attorney's fees and costs related to said losses or damages. Such indemnification and holding harmless shall include such losses or damages incurred by, or in connection with, acts or omissions of JoVE, its employees, agents or independent contractors.

12. **Fees.** To cover the cost incurred for publication, JoVE must receive payment before production and publication the Materials. Payment is due in 21 days of invoice. Should the Materials not be published due to an editorial or production decision, these funds will be returned to the Author. Withdrawal by the Author of any submitted Materials after final peer review approval will result in a US\$1,200 fee to cover pre-production expenses incurred by JoVE. If payment is not received by the completion of filming, production and publication of the Materials will be suspended until payment is received.

13. **Transfer, Governing Law.** This Agreement may be assigned by JoVE and shall inure to the benefits of any of JoVE's successors and assignees. This Agreement shall be governed and construed by the internal laws of the Commonwealth of Massachusetts without giving effect to any conflict of law provision thereunder. This Agreement may be executed in counterparts, each of which shall be deemed an original, but all of which together shall be deemed to be one and the same agreement. A signed copy of this Agreement delivered by facsimile, e-mail or other means of electronic transmission shall be deemed to have the same legal effect as delivery of an original signed copy of this Agreement.

A signed copy of this document must be sent with all new submissions. Only one Agreement required per submission.

CORRESPONDING AUTHOR:

Name:

Steven Weinigarten

Department:

Shaping

Institution:

Fraunhofer Institute for Ceramic Technologies and Systems

Article Title:

Multi-color ceramic based 4D components - Additive Manufacturing of black- and-white zirconia components by Thermoplastic 3D-Printing (TSDP)

Signature:

S. Weinigarten

Date:

02.11.2018

Please submit a signed and dated copy of this license by one of the following three methods:

- 1) Upload a scanned copy of the document as a pdf on the JoVE submission site;
- 2) Fax the document to +1.866.381.2236;
- 3) Mail the document to JoVE / Attn: JoVE Editorial / 1 Alewife Center #200 / Cambridge, MA 02139

For questions, please email submissions@jove.com or call +1.617.945.9051

Rebuttal Letter

We have change everything you mentioned and hope that the whole manuscript is now corresponding to your expectations.